

Edge table view

Changes the view mode of the active folder to “Edge table view”. In this view the edge data is displayed in a table. You can edit edge properties by selecting the corresponding field in the table. You can also copy the table contents and paste it into e.g., a spreadsheet. The table format can be customized to show any combination of properties.