

Sqr

The Square function. This function simply squares the input value.

Default parameter values:

None

Example:

Input = 5.0 => Output =
25.0

Input = 8.0 => Output =
64.0