

SELECTING RS232 PORT.

By default this stack uses the Modem port. However you can select the printer port from the "Port," menu. You can of course always change the stack script so that the printer port becomes the default if you wish.