
THE NEON BOX

A NEON BOX IS A VERY SIMPLE ADJUSTMENT TO YOUR FONE, THAT WILL ALLOW A VERY CLEAR PASSAGE FROM YOUR COMPUTER TONES TO YOUR FONE. IT ALSO WORKS GREAT FOR RECORDING TONES, SEX FONE, OR ANYTHING ELSE YOU WANT TO RECORD OFF OF YOUR FONE.

TOOLS:

THIS MODIFICATION IS VERY SIMPLE, AND CAN BE USED ON MOST FONES, THOUGH IT IS MORE DIFFICULT ON ONE-PIECE UNITS. ALL YOU NEED IS AN OLD PAIR OF HEADFONES, OR SIMILAR, A FILIPS SCREWDRIVER, A SOLDERING IRON AND SOME SOLDER.

INSTRUCTIONS

OPEN YOUR FONE WITH THE SCREWDRIVER. WHEN OPENED, LOOK FOR THE RED AND BLACK WIRES THAT LEAD TO THE MOUTHPIECE. (IF YOU'RE NOT SURE WHICH WIRES LEAD TO THE MOUTHPIECE, OPEN UP THE MOUTHPIECE AND FIND THE SAME COLOR WIRES ON THE BASE. FOR ONE-PIECE UNITS, JUST LOCATE THE MOUTHPIECE).

WHEN YOU HAVE FOUND THE MOUTHPIECE, OR WIRES, CUT THE EARD OF THE HEADFONES OFF, AND ONE WIRE (THE ONE THAT LEADS TO THE RIGHT EAR). STRIP THE LEFT WIRE SO ABOUT AN EIGHTH INCH IS SHOWING. KEEP THE OTHER SIDE IN TACT.

THEN ON THE RED WIRE, SOLDER THE WIRE THAT IS SEPARATLY SEALED FROM THE OTHER ONE. ON THE BLACK WIRE (THESE ARE THE ENDS OF THE WIRE ON THE CIR-

CUIT BOARD) SOLDER THE WAIRE WRAPPED
AROUND THE OTHER WIRE. THEN SOLDER A
HOLE FOR THE WIRE. YOU HAVE NOW MADE
A NEON BOX.