Article Created: 27 August 1993
TOPIC
I can enter words which contain non-English characters (such as "ä", "é", or " σ ") into the Newton MessagePad's word list. Why do these words appear without the accent?
DISCUSSION

You can save words with non-English characters to the word list of the U.S. version of the Newton Message Pad. These words, however, will be displayed without accents and the MessagePad will not recognize non-English characters when you write them. We recommend that you do not enter words with non-English characters into your word list.

Copyright 1993, Apple Computer, Inc.

Using Foreign Characters in Word List

Posted to: Newton World of Newton Support Information Support Tips September 3, 1993