

TABLE OF CONTENTS

TABLE OF CONTENTS.....	1
Important.....	2
For Windows 95 user.....	2
For Windows 98 user.....	2
For Windows NT4.0 user.....	2
1. Voodoo Banshee Features.....	3
2. Board Outline.....	4
SP3800 using SGRAM.....	4
SP3800C using SGRAM.....	4
3. Hardware Installation.....	5
3.1 Package Contents.....	5
3.2 Installing the Card.....	5
3.3 Resolutions and colors supported:.....	5
4. Smart Installation.....	6
5. Manually install Windows 95 & Windows 98 drivers.....	8
5.1 Installation and Setup.....	8
5.1.1 Windows95.....	8
5.1.2 Windows98.....	11
5.2 How to change Color Depth and Resolution.....	17
5.3 How to change Refresh Rate.....	18
6. WindowsNT4.0.....	19
FCC Statement.....	20
Trademark Acknowledgments.....	20

Important

Operating System requirement:

For Windows 95 user

Need OSR2.1 or newer version.

OSR2.1 means OSR2.0 + USB supplement upgrade.

Please find this upgrade file "usbsupp.exe" from your OS supplier.

DirectX 5.0 r newer

For Windows 98 user

DirectX 5.0 r newer

For Windows NT4.0 user

Need at least SP3 or newer version

Please find this **Service Pack 3** upgrade from your OS supplier.

1. Voodoo Banshee Features

General Features

- Fully integrated 128-bit VGA/2D/3D/Video Accelerator
- Ultimate 3D experience with 100 Mpixels/sec and 4 Million triangles/sec
- No-compromise 3D image quality at frame rates
- Optimized for software DVD acceleration (Optional)
- Full VMI interface (including a host port) for optional:
 - Full hardware DVD decoding, Video capturing, TV tuner support
- High-resolution 1600x1200 85Hz with a 230MHz RAMDAC
- PC97 and PC98 rev 1.0 compliant
- VESA DDC2B support

2D Acceleration

- Full featured 128-bit BitBlit Engine & Windows GUI Acceleration
- Source and Destination Chroma-keying for DirectDraw

3D Acceleration

- Full hardware setup of triangle parameters
- 16-bit integer and floating-point Z-buffering with biasing
- Transparency and chroma-key with dedicated color mask
- Alpha blending on source and destination pixels
- Sub-pixel and sub-texel correction to 0.4x0.4 resolution
- 24-bit color dithering to native 16-bit RGB
- Per-pixel atmospheric fog with programmable fog zones
- Polygon edge anti-aliasing
- Perspective correct (true divide-per-pixel) 3D texture mapping
- True per-pixel, LOD MIP mapping with biasing and clamping
- High performance bilinear and trilinear filtering
- RGB modulation/addition/blending combines textures and shaded pixels
- Texture compositing for multi-texture special effects
- Support for 14 texture map formats
- 8-bit paletted textures with full bilinear filtering
- Texture compression through narrow-channel YAB format

Video Acceleration

- Multiple video window support
- Bilinear horizontal and vertical filtering
- YUV 4:2:2, and YUV 4:2:0 planar support

Host Interface

- High performance AGP interface including optimized support for sideband addressing and pipelining
- FIFO optimized for high speed bursting of geometry and texture data
- Optimized for Pentium II IO architecture

 
Memory System

- Advanced architecture with 1.6 GB/sec memory bandwidth
- Support 8/16 MB SGRAM Frame buffer
- Software support Windows95/98 & NT4.0

2. Board Outline


SP3800 using SGRAM

16MB on board, board size: 161 x 108 mm.

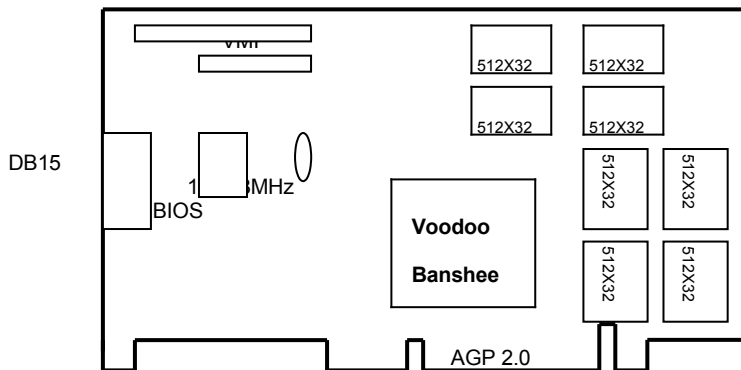

SP3800C using SGRAM

 16MB on board, board size: 151 x 88 mm. (another 4 pieces SGRAM on solder side)

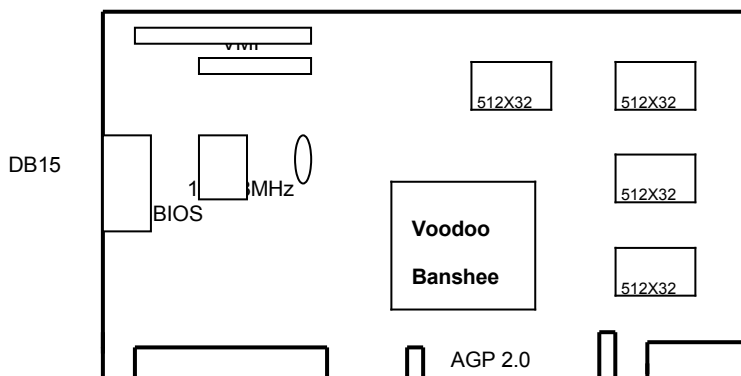

3. Hardware Installation

3.1 Package Contents

1. Voodoo Banshee Accelerator card.
2. CD title or Software diskettes
3. This manual.(D:\Manual\3800manu.doc)

3.2 Installing the Card

1. Turn off your computer.
2. Remove the cover of the computer per the owner's manual.
3. Install the card in the AGP bus slots.
4. Replace the cover.

3.3 Resolutions and colors supported:

Voodoo Banshee with 16MB are fully compatible VGA with the addition of Hi-Color and True Color modes depending on the amount of video memory stalled. The amount of memory needed to display various resolutions is shown below

Voodoo Banshee

Resolution & Colors	BPP	Refresh Rate (HZ)
640x480-256c	8	60/75/85/100/120
640x480-64Kc	16	60/75/85/100/120
640x480-16Mc	24	60/75/85/100/120
640x480-4Gc	32	60/75/85/100/120
800x600-256c	8	60/75/85/100
800x600-64Kc	16	60/75/85/100
800x600-16Mc	24	60/75/85/100
800x600-4Gc	32	60/75/85/100
1024x768-256c	8	60/70/75
1024x768-64Kc	16	60/70/75
1024x768-16Mc	16	60/70/75
1024x768-14Gc	32	60/70/75
1280x1024-256c	8	60
1280x1024-64Kc	16	60
1280x1024-64Kc	24	60
1280x1024-4Gc	32	60

4. Smart Installation

For windows95 osr2.1, windows98, windowsNT4.0 SP3

4.1 Put the Smart Installation CD in your CD-ROM

 


4.2 Select the **language** for you.


Then Select the **Driver installation**



- 4.3 Click the **Confirm Installation...** button.
Then Select the **OK**

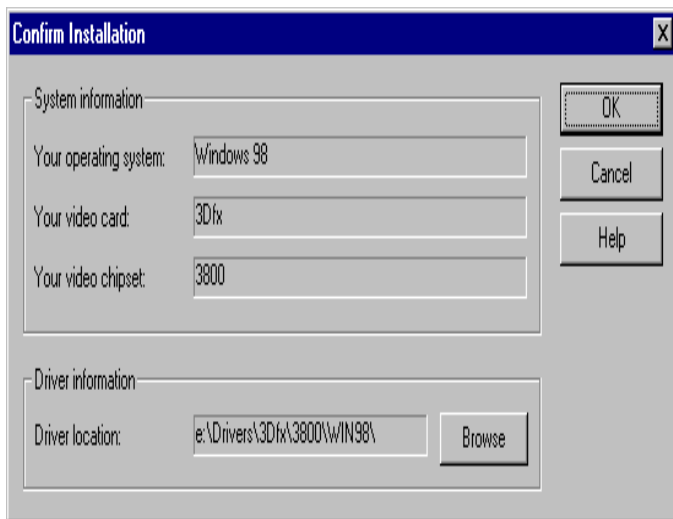

 - 4.4 Click the **Driver Confirmation**
Then Select the **Install**

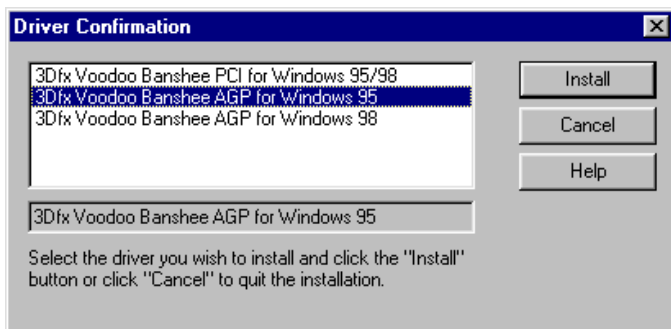

- 4.5 Then restart your computer.

 
5. Manually install Windows 95 & Windows 98 drivers

5.1 Installation and Setup

5.1.1 Windows95

The Windows setup program installs and modifies all of the necessary files. Follow these steps to install the Windows 95 driver.

- Insert the "Window 95 Driver" Installation Diskette or DISC (CD Title Driver).
- Select **Control Panel** from **My Computer** group.

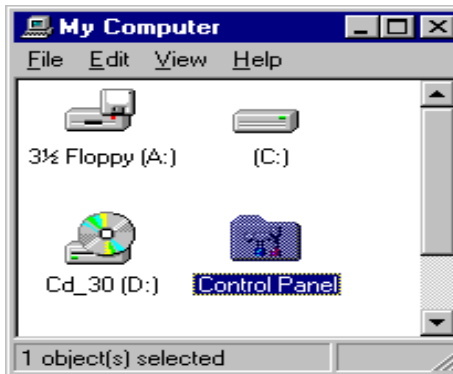


- Select the **Display** icon




- Double-click on the **Display** icon in the Setting -> **Control Panel** folder. You can also

click the right mouse button anywhere on the desktop and select the Properties option from the pop-out menu.

 
- Click the **Settings** tab.

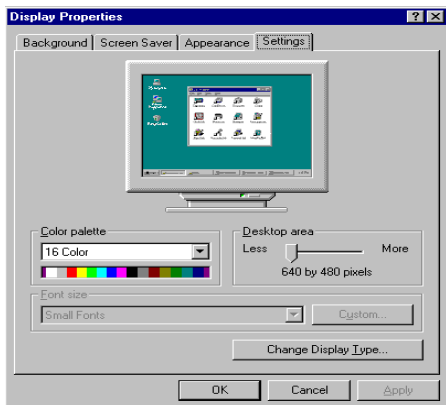

 
- Click the **Change Display Type** button.

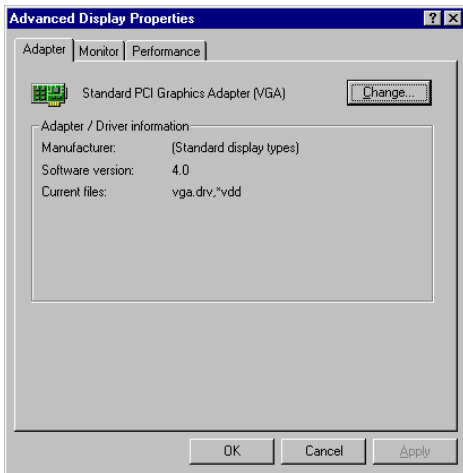

- Click the **Have Disk** button.

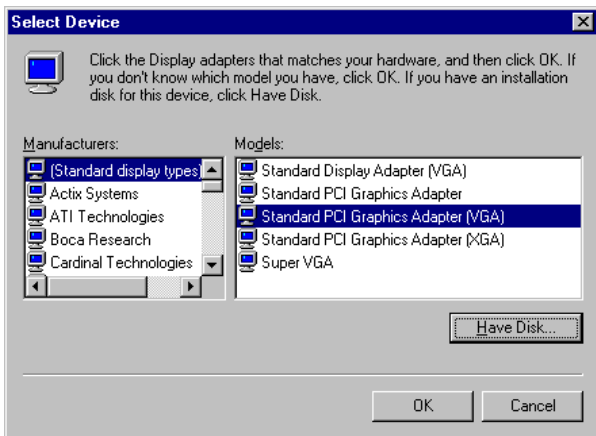 

 - Change directories and Select **banshee.inf**.
Diskette is **A:** or **B:** WIN95 , Disc (CD Title) is **E:\drivers\3dfx\3800\WIN95**
("A:" or "B:" → Diskette Drive "E:" → CD Drive "3800" → VGA model name)

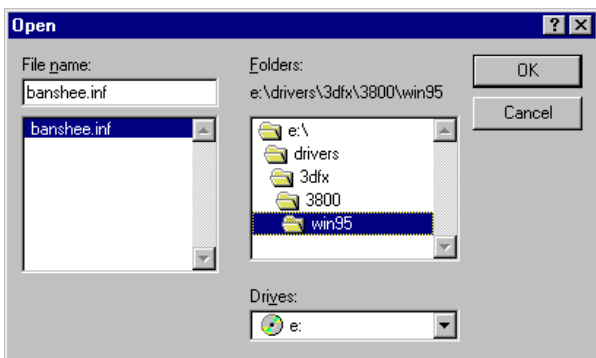


- Select **3800 AGP** driver form the list and click the **OK** button. If a message stating that one or more driver files is older than the files on the system respond **YES** to overwrite the files.
- Click the Close button and Apply button, and restart your computer.

5.1.2 Windows98


- Select **Control Panel** from **My Computer** group.



 
- Select the **Display** icon

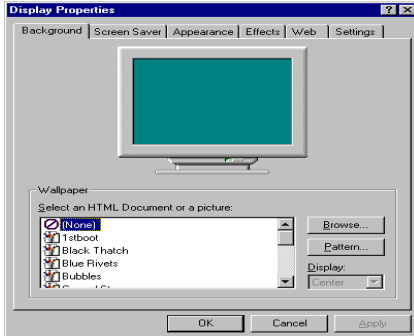

 
- Double-click on the **Display** icon in the Setting -> **Control Panel** folder. You can also click the right mouse button anywhere on the desktop and select the Properties option from the pop-out menu.
- Click the **Settings** tab.

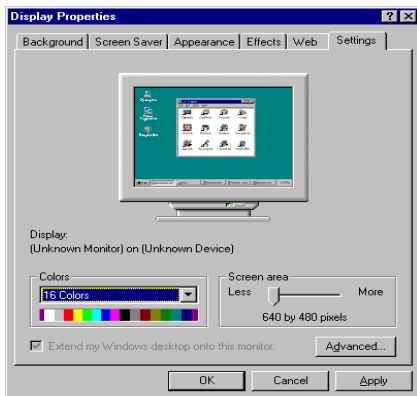

 - Then show **[Unknown Device.] Properties** tab
Select **Adapter**

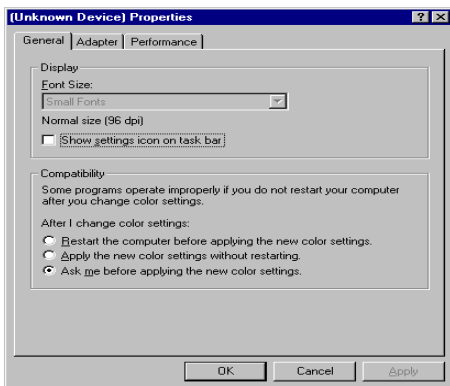

 - Then show **Standard PCI Graphics....** Tab
Select **Change**

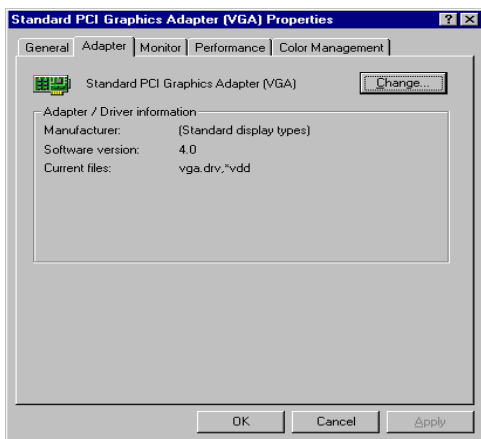

- Then show **Update Device** tab
Select **Next**



 
- Then show **Update Device** tab
Select **Search for a better.....**
Then select **Next**.




- Then show **Update Device** tab
If the **Specify a location** is wrong
Please select **Brows**



- Then show **Browse for Folder** tab
Select **D:\Drivers\3DFX\3800\Win98**
Then select **OK**

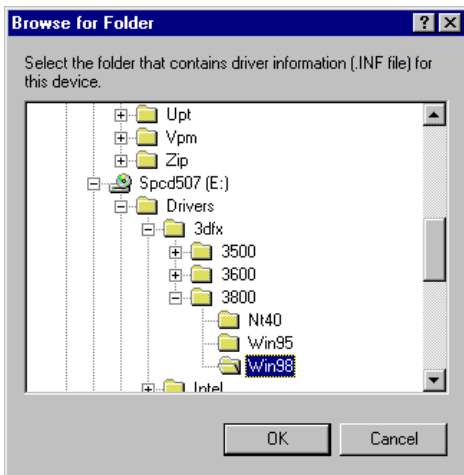

 - Then show **Update Device Driver Wizard** tab
Select **CD-ROM driver**
Click the **Specify a locator**, if right
Then select **Next**

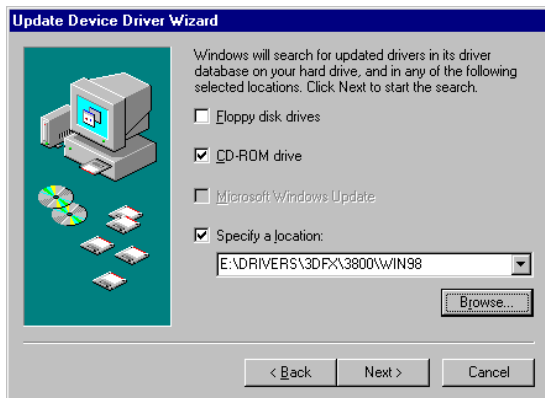

- Then show **Update Device Driver Wizard** tab

 
Select **Next**



- Then show **Update Device Driver Wizard** tab
Select **Finish**




- Then show **System Settings Change** tab
Select **OK**

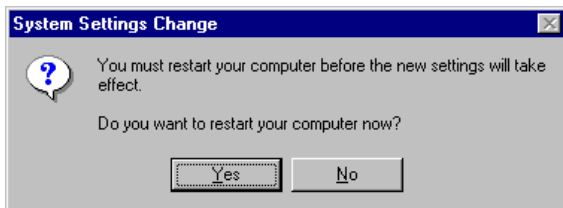


5.2 How to change Color Depth and Resolution

 - 1 Make sure that you have installed the **WINDOWS95** Driver.
- 2 Click on the **Start** box in the lower left corner and proceed to **Control Panel**.
- 3 Inside the **Control panel** group , click on **Display** icon to open the **Display Properties** folder and select the **Setting table**
- 4 Click on the pull-down arrow from the **Color** palette area to select color depth or adjust the sliding bar to either **Less** or **More** from the **Desktop area**
- 5 Select **OK** to restart **WINDOWS95** and new color depth or the new resolution takes effect.

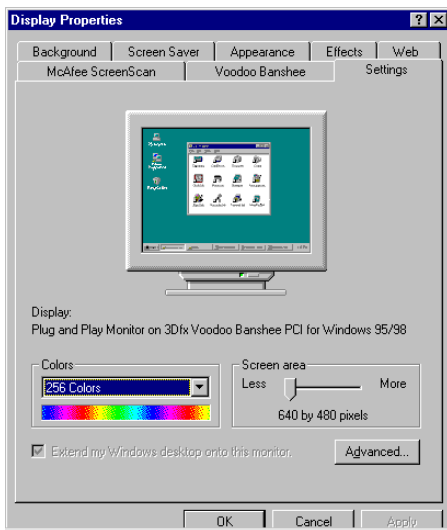

5.3 How to change Refresh Rate

 1. Make sure that you have installed the **WINDOWS95** Driver. Click on the **Start** box in the lower left corner and proceed to Setting, **Control Panel**
2. Inside the **Control panel** group , click on **Display** icon to open the **Display Properties** folder and select the **S3 Refresh table**
3. Click on the **Change Configuration** to change refresh rate
4. Select **OK** and new refresh rate takes effect

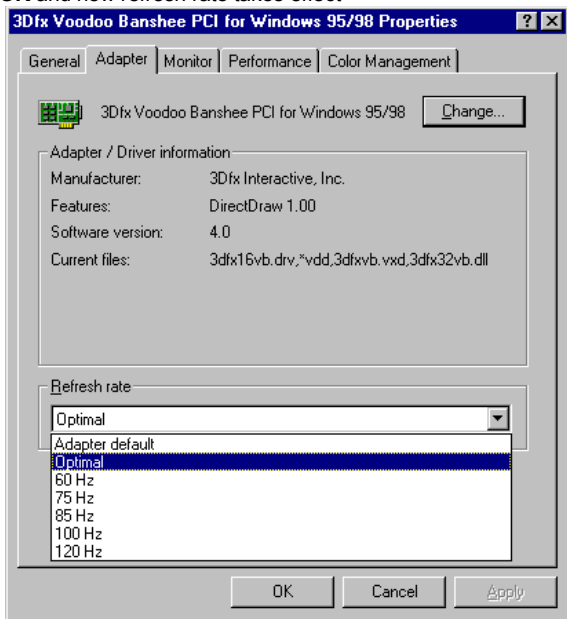

- Refresh Rate default is Optimal .
- If you change Refresh Rate from Optimal to another , you must be to restart WINDOWS 95
- Be sure your monitor can support DDC functions(or it is Plug & Play monitor) ,otherwise you can not select refresh rate.

6. WindowsNT4.0

The following steps describe how to install WIN NT 3.51 and 4.0 display drivers

1. Select **Control Panel** from the **Main** group.
2. Select the **Display** icon.
3. Select **Change Display Type**.
4. Select Change from the **Adapter Type** area.
5. Select **Other**.
6. Place the **WINDOWS NT** Installation Disk or Disc (CD Title) into Driver. Click **OK**.
7. Select **Install** and click "**YES**" when the Installing Driver dialog box appears.
8. When the WINDOWS NT **Setup** dialog box appears select driver A or CD ROM, and click "**Continue**".

A message appears stating that drivers were successfully installed. Click **OK**. Another message appears stating that the driver could not be restarted dynamically. Restart **Windows NT** to run the new driver. Click **OK**.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference. (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference in to radiate communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notice:

(1) An Unshielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used.

(2) Use only shielded cables to connect I/O devices to this equipment.

(3) Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Trademark Acknowledgments

All brand names and trademarks are the property of their owners.