

3. Smart Installation


3.1 Put the Smart Installation CD in your CD-ROM




3.2 Select the **language** for you. Then Select the **Driver installation**



3.3 Click the **Confirm Installation...** button. Then Select the **OK**

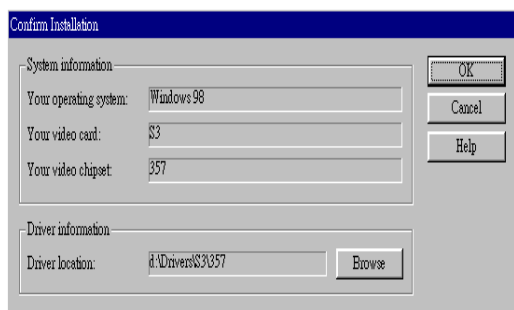

3.4 Click the Driver Confirmation
Then Select the **Install**

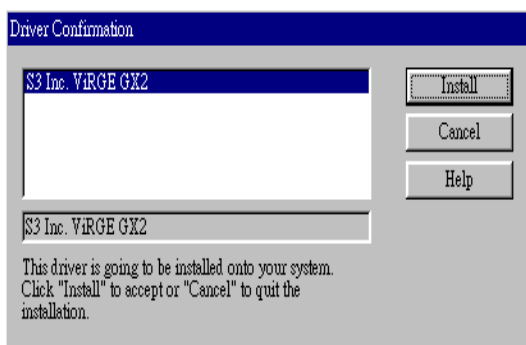

3.5 Then restart your computer.


4. Windows 95 & Windows 98 Setup

4.1 Installation and Setup


4.1.1 Windows 95

The Windows setup program installs and modifies all of the necessary files. Follow these steps to install the Windows 95 driver.


- Insert the "Window 95 Driver" Installation Diskette or DISC (CD Title Driver).
- Select **Control Panel** from **My Computer** group.

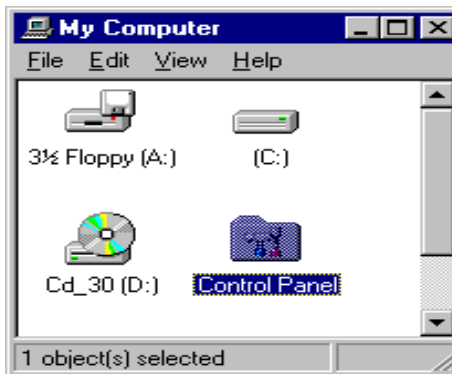


- Select the **Display** icon

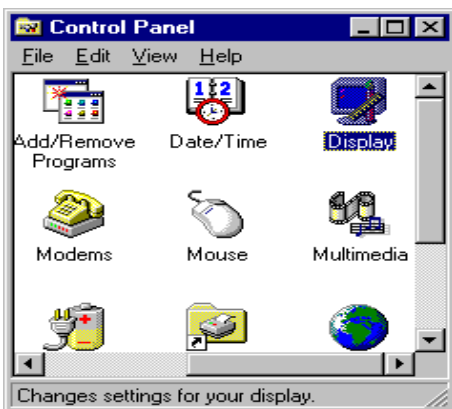


- Double-click on the **Display** icon in the Setting -> **Control Panel** folder. You can also click the right mouse button anywhere on the desktop and select the Properties option from the pop-out menu.
- Click the **Settings** tab.

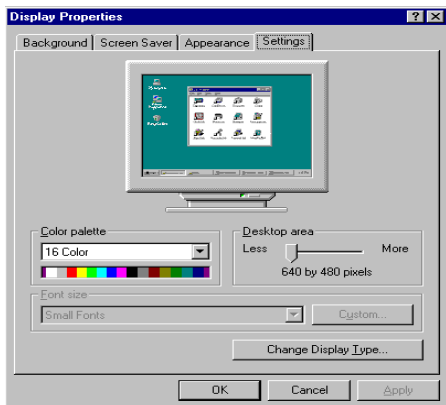


- Click the **Change Display Type...** button.

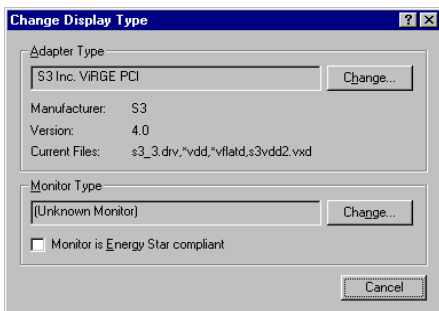

- Click the **Have Disk** button.

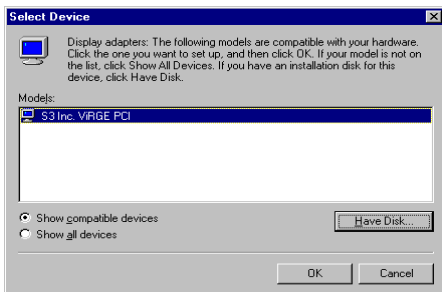

- Change directories and Select **S3 VIRGE.INF**.
Diskette is **A:** or **B:** WIN95 , Disc (CD Title) is **E:\drivers\S3\357\WIN95**
("A:" or "B:" → Diskette Drive "E:" → CD Drive "357" → VGA type)

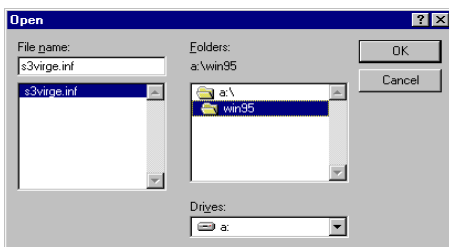


- Select **S3 Trio64 V2 PCI** or **S3 VIRGE PCI** driver from the list and click the **OK** button. If a message stating that one or more driver files is older than the files on the system respond **YES** to overwrite the files.
- Click the Close button and Apply button, and restart your computer.

4.1.2 Windows 98


- Select **Control Panel** from **My Computer** group.




- Select the **Display** icon

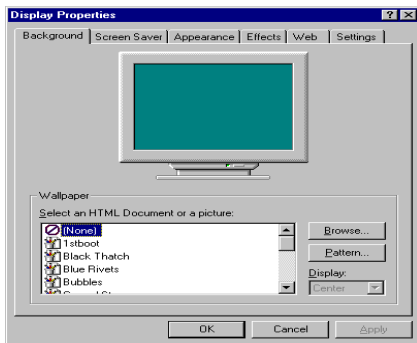


- Double-click on the **Display** icon in the Setting -> **Control Panel** folder. You can also click the right mouse button anywhere on the desktop and select the Properties option from the pop-out menu.
- Click the **Settings** tab.

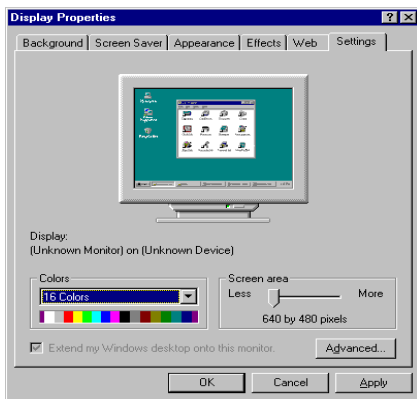

- Then show **[Unknown Device.] Properties** tab
Select **Adapter**

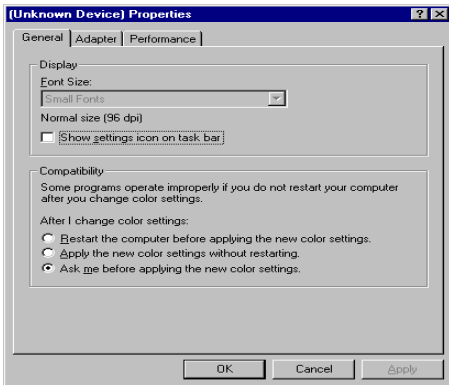

- Then show **Standard PCI Graphics....** tab
Select **Change**

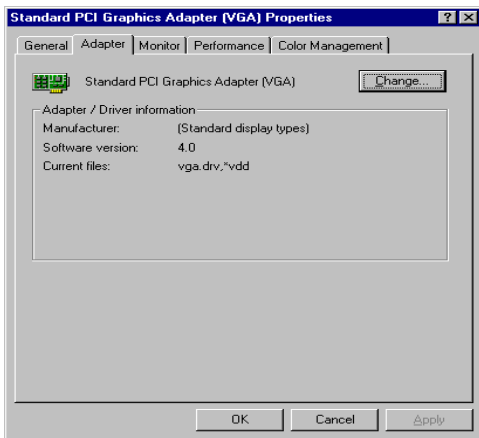


- Then show **Update Device** tab
Select **Next**




- Then show **Update Device** tab
Select **Search for a better.....**
Then select **Next**.




- Then show **Update Device** tab
If the **Specify a location** is wrong
Please select **Brows**

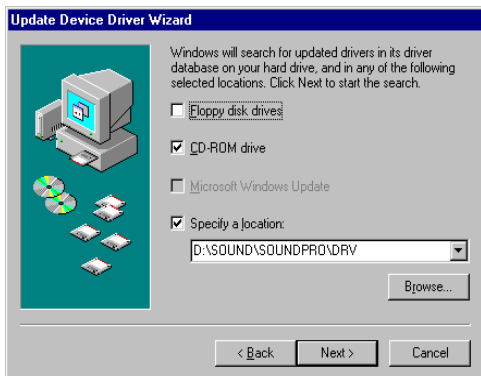

- Then show **Browse for Folder** tab
Select **D:\Drivers\S3\260\Win98**
Then select **OK**

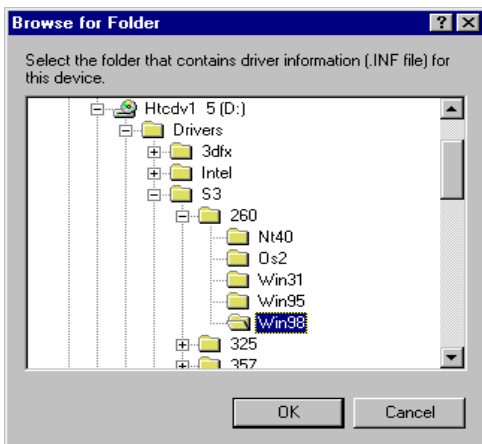

- Then show **Update Device Driver Wizard** tab
Select **CD-ROM driver**
Click the **Specify a locator**, if right
Then select **Next**

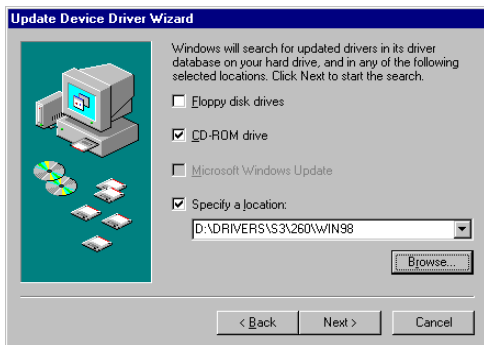


- Then show **Update Device Driver Wizard** tab
Select **Next**



- Then show **Update Device Driver Wizard** tab
Select **Finish**




- Then show **System Settings Change** tab
Select **OK**

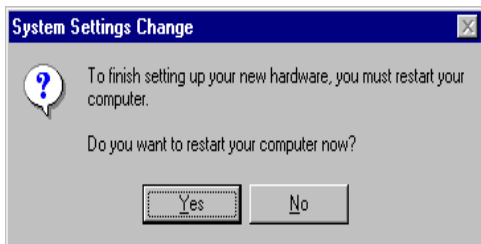


4.2 How to Change Color Depth and Resolution

- 1 Make sure that you have installed the **WINDOWS95** Driver.
- 2 Click on the **Start** box in the lower left corner and proceed to **Control Panel**.
- 3 Inside the **Control panel** group , click on **Display** icon to open the **Display Properties** folder and select the **Setting table**
- 4 Click on the pull-down arrow from the **Color** palette area to select color depth or adjust the sliding bar to either **Less** or **More** from the **Desktop area**
- 5 Select **OK** to restart **WINDOWS95** and new color depth or the new resolution takes effect.

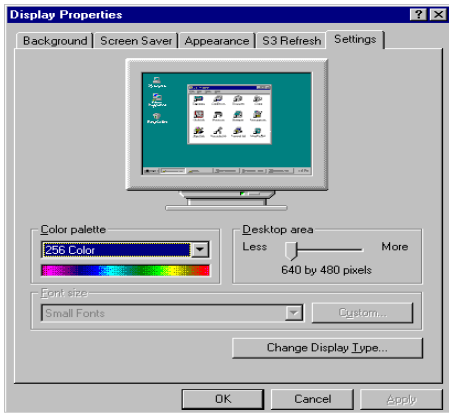

4.3 Change Refresh Rate

1. Make sure that you have installed the **WINDOWS95** Driver. Click on the **Start** box in the lower left corner and proceed to Setting, **Control Panel**
2. Inside the **Control panel** group , click on **Display** icon to open the **Display Properties** folder and select the **S3 Refresh table**
3. Click on the **Change Configuration** to change refresh rate
4. Select **OK** and new refresh rate takes effect

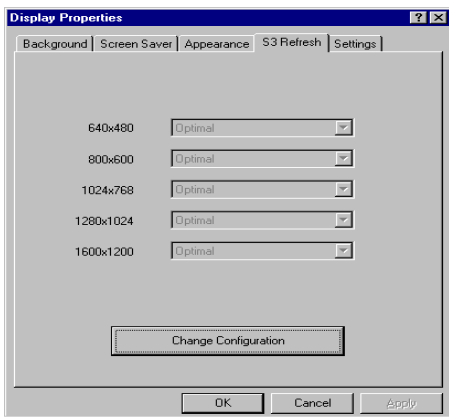

- Refresh Rate default is Optimal .
- If you change Refresh Rate from Optimal to another , you must be to restart **WINDOWS 95**

5. Windows NT 3.51, 4.0

The following steps describe how to install WIN NT 3.51 and 4.0 display drivers

1. Select **Control Panel** from the **Main** group.
2. Select the **Display** icon.
3. Select **Change Display Type**.
4. Select Change from the **Adapter Type** area.
5. Select **Other**.
6. Place the **Windows NT** Installation Disk or Disc (CD Title) into Driver. Click **OK**.
7. Select **Install** and click "**YES**" when the Installing Driver dialog box appears.
8. When the WINDOWS NT **Setup** dialog box appears select driver A or CD- ROM, and click "**Continue**".

A message appears stating that drivers were successfully installed. Click **OK**. Another message appears stating that the driver could not be restarted dynamically. Restart **Windows NT** to run the new driver. Click **OK**.

All brand names and trademarks are the property of their owners.