

KENTROL KEYBOARD SHORTCUTS

TUNING HOT KEYS

In a *Tuner* window, use the 'c' and 'f' keys to quickly switch between the coarse and fine tuning bars. Then you can use the **arrow**, **PgUp/PgDn**, **Home** and **End** keys to change frequency. Activate the mode box with the 'm' key, leave it with **Tab** to the coarse tuning bar.

The keys below work whenever a radio window - *Tuner or Memories* - is active

Ctrl + a :	select vfo A		
Ctrl + b :	select vfo B		
Ctrl + m :	select Mem		
Ctrl + h :	HOT SPOT (add active freq to Hot Spot List)		
Ctrl + l :	Log (Log Entry Dialog)		
Ctrl + s :	toggles SPLIT on/off		
Ctrl + t :	toggles TRANSMIT on/off		
Ctrl + SPACEBAR :	toggles AUTOSCROLL on/off		
F2 :	GOTO next HAM PHONE segment	F7 :	GOTO next BROADCAST band
F3 :	GOTO next HAM CW segment	F8 :	GOTO next MARINE PHONE segment
F4 :	GOTO next HAM DIGITAL segment	F9 :	GOTO next MARINE CW segment
F5 :	GOTO next TIME SIGNAL frequency	F10 :	GOTO next MARINE DIGITAL segment
		F11 :	GOTO next AIRCRAFT band

NB: *The function keys work even when the BandBox is not visible*

Ctrl + u :	Jump UP
Ctrl + d :	Jump DOWN

SYSTEM HOT KEYS (always available)

F1 :	HELP
Ctrl + n :	Create a new file (File New Dialog)
Ctrl + o :	Open an existing file (File Open Dialog)

EDITING HOT KEYS

These keys work whenever a text window - *Memfile or Log* - is active

Ctrl + c :	Copy	Ctrl + z :	Undo
Ctrl + x :	Cut		
Ctrl + v :	Paste	Ctrl + p :	Print