

Shows preview of documents you print.

Shows summary of settings.

Restores default settings.

Sets the number of copies you want printed.

Some programs provide a way to set the number of copies you want printed. If you change the setting here, it will apply to all documents you print to this printer. If you change the setting in your program, it will affect only the document you print from that program. It is recommended that you do not change the setting in both places.

Specifies how to print multiple-page jobs.

Click Collate Off if you want uncollated pages.

Click Collate On if you want collated pages.

Specifies how to turn the page if you want to print on both sides. When you print on two sides of the page, your document can be read differently depending on the way the printer turns the paper. Click None if you want to print on one side of the paper only.

Specifies the text be placed in the background of an existing document.

Specifies if watermarks are placed on first page only.



Specifies how to layout on the page.

Click N-UP if you want multiple reduced pages on a single page of paper.

Click Booklet if you want booklet style documents.

Click Enlarge/Reduce if you want zoomed documents.

Specifies page order for N-UP printing.

Specifies output paper for N-UP printing.

Specifies if border line is placed for each N-UP page.

Specifies page order for Booklet printing.

Specifies output paper for N-UP printing.

Specifies the size of the image to print.

Shows watermarks dialog to edit the watermarks chosen in text menu.



Add new watermarks and show watermarks dialog to edit it.

Deletes the watermarks chosen in text menu.

Specifies the size of paper or envelope you want to use. Click the size you want. If your printer supports custom paper sizes, click the Custom icon, and then specify the size.

Specifies how the document is positioned on the page when printed.

Specifies where the paper you want to use is located in the printer.

Specifies if paper source of first page is different from others.

Specifies where the paper you want to use for first page is located in the printer.

Shows copyright.



Specifies the type of dithering used in printing. Dithering produces gray shading in graphics.

Click None if you don't want any dithering.

Click Fine if your graphics include photograph.

Click Line Art if your graphics include well-defined borders between black, white, and gray shadings.

Specifies how dark to print graphics in your document.

Controls how the printing information is rendered by your printer. Using Vector Graphics can significantly increase printing speed. However, if you have problems, such as incorrect overlaying, trying choosing Raster Graphics.

Controls how TrueType fonts are printed.

Generally, downloading TrueType as Bitmaps speeds up printing. However, if your document contains graphics and you are not repeating the same text frequently on a page, use the Print TrueType As Graphics option. This option is also useful if you want to print graphics over text so that only the exposed part of a character is printed, or if you want characters clipped in cases where they are not visible on the screen

Lists the options that you can install in your printer. For more information, see your printer manual.

Enables you to change the setting for the selected option.

Specifies print job name.

Reserves some of your printer's memory for an output buffer. Some very complex documents require page protection in order to print; however, using page protection uses more memory in your printer.

If this option is unavailable, it means that your printer does not have enough memory to use page protection.



Reduces toner consumption.

Smooths out the jagged edges of printed characters and graphics.

Controls toner intensity.

Sets the resolution to 300 or 600 dpi.

Specifies the text for watermarks.

Specifies the typeface of font for watermarks.

Specifies the style of font for watermarks.

Specifies the size of font for watermarks.



Specifies the darkness of font for watermarks.

Specifies the angle for watermarks

Specifies how watermarks are placed.

Click **Automatically Center Watermarks** if you want to place them automatically.

Click **Position Relative to Center** if you want to place them manually.

Specifies x position of watermarks.

Specifies y position of watermarks.

Specifies the width of the paper you are using. Type a number within the range supported by your printer.

Specifies the length of the paper you are using. Type a number within the range supported by your printer.

Specifies the unit of measurement (one tenth of a millimeter or 1/100 of an inch) that you want to use.



