

Linux Touch Screen HOWTO

Table of Contents

<u>Linux Touch Screen HOWTO</u>	1
<u>Christoph Baumann, cgb@debian.org</u>	1
<u>1. Which sort of devices are described here?</u>	1
<u>2. How to configure the device</u>	1
<u>3. Activating the device</u>	1
<u>4. Suggested reading</u>	1
<u>1. Which sort of devices are described here?</u>	1
<u>2. How to configure the device</u>	1
<u>3. Activating the device</u>	3
<u>4. Suggested reading</u>	3

Linux Touch Screen HOWTO

Christoph Baumann, cgb@debian.org

Sep 22, 2000

This document describes how to set up a touch screen input device under XFree86. As the author had only the opportunity to work with devices from EloTouch(R) and MicroTouch(R) this HOWTO is rather specific for these devices.

[1. Which sort of devices are described here?](#)

[2. How to configure the device](#)

[3. Activating the device](#)

[4. Suggested reading](#)

[1. Which sort of devices are described here?](#)

This HOWTO concentrates on devices connected via the serial port i.e. /dev/ttyS0 or /dev/ttyS1.

[2. How to configure the device](#)

Touch screen devices are configured in the Xinput section in the XF86Config file (mostly /etc/X11/XF86Config or /etc/XF86Config). At first verify that the device driver modules exist. They are located in /usr/X11R6/lib/modules/ (the modules for the above mentioned devices are xf86Elo.so and xf86MuTouch.so). Now have a look into XF86Config. There should be a section looking like this:

```
Section "Files"
...
ModulePath "/usr/X11R6/lib/modules"
```

Linux Touch Screen HOWTO

```
...
EndSection
```

To get the module loaded by the X server there has to be a section like this:

```
Section "Module"
Load "xf86Elo.so"
EndSection
```

Now the more tricky part. X needs to know some parameters about the device. The section for this looks like this (see "man XF86Config" for more details):

```
Section "Xinput"
  SubSection "Elographics"
#the entry for a MicroTouch device would be SubSection "MicrotouchFinger"
  Port "/dev/ttyS1" # for a device at serial port 2
  DeviceName "TouchScreen" #could be any unambiguous name
  MinimumXPosition 300
  MaximumXPosition 3700
  MinimumYPosition 300
  MaximumYPosition 3700
  UntouchDelay 10 #not supported with MuTouch
  ReportDelay 10 #not supported with MuTouch
EndSubSection
EndSection
```

The values for the entries `MinimumXPosition` etc. are of course specific for the setup of the hardware (i.e. depend on the position of the touch screen relative to the monitor). The values determine where the points (0,0) and (xmax,ymax) on your monitor (xmax and ymax depend on the resolution chosen for the Xserver, such as 1024x768) are mapped on the touch screen. The device driver reads these values and interpolishes the other coordinates. For illustration:

```
-----touch screen area-----
I                                     I
I #####visible monitor area##### I
I #x                                 # I
I # (0,0)                             # I
I # (MinimumXPosition,MinimumYPosition) # I
I #                                   # I
I #                                   # I
I #                                   # I
I #                                   # I
I #                                   # I
I #                                   # I
I #                                   # I
I # (MaximumXPosition,MaximumYPosition)# I
I #                                   (xmax,ymax)# I
I #                                   x# I
I ##### I
I                                     I
-----
```

This mapping can be done by trial and error or by reading the raw output of the device (needs some serial port programming, see "The Linux Serial Programming HOWTO"). For the types `EloTouch` and `MicroTouch` exists a rudimentary calibration tool (written by the author of this document, it can be found at

<ftp://metalab.unc.edu/pub/linux/X11/xutils/touchcal-0.1.tar.gz>).

3. Activating the device

After starting X, type in an Xterminal the command

```
xsetpointer <devicename>
```

where<devicename> is the name defined in XF86Config with the line `DeviceName " "`, in this example it would be `TouchScreen`.

4. Suggested reading

- Manpage for XF86Config
 - <http://www.elotouch.com/Support/linux.asp>
 - <http://www.hof-berlin.de/tablet/tablet.html> (Thanks to Christer Olofsson for sending me this URL)
 - The manual shipped with your touch screen :-)
-