

## **ISDN Digi Setup Help**

[Digi ISDN Adapter Card Setup Help](#)

[Line Configuration Options Help](#)

## Digi ISDN Adapter Card Setup Help

In the following fields, select the values that match your configuration.

### IRQ Level

Set this field to an unused interrupt (IRQ). You must choose a value that's unique, that is, no other board or device can have the same IRQ level assigned to it. The most common levels are:

IRQ level	Used by
3	Standard serial ports COM2 and COM4, if present.
5	A secondary parallel printer port, if present.
7	A primary parallel printer port, if present.

### I/O Base Address

If necessary, change the default setting to the port address you set the board's DIP switch to. See the Digi documentation for setting the I/O base address.

### Memory Base Address

Select a memory base other than the default. If you don't know, ask your system administrator, or find an available 16K window through trial and error. If you choose a memory base through trial and error, start with the default, and then try address in the following order: 0xD80000, 0xC80000, 0xC40000, 0xCC0000. If none of these works, try address in the 0xE0000 range (if available). If none of these address works, call Digi Technical Support.

### Switch Type

Select the type of ISDN switch. The options are:

Type	Switch
AT&T	AT&T, 5ESS, and Generic 5E4.2 and up switches.
NTI	Northern Telecom, DMS-100, Functional, or BCS-29 and greater.
NT-1	National ISDN compatible.
Generic	Generic CCITT/ANSI.
Auto	Auto Detect. Select this type only if the switch is unknown.

### Line Options

Click this button to configure your line options.

## **Line Configuration Options Help**

Fill in the fields on this screen with information your ISDN service provider has supplied.

### **Line Number**

Select the number of the line your Digi communicates through.

### **Enable Terminal Management**

Check the box to enable this feature only if you've selected the AT&T switch type. If your line is terminal type B, C, or D, you need Terminal Management to issue and receive voice calls.

### **Number of Logical Terminals**

Select 1 unless your system supports two logical terminals.

Fill in the following fields for Logical Terminal #1 if you selected 1 in the previous field, and for both terminals if you selected 2.

### **Service Profile ID**

Type the number supplied by your service provider.

### **Phone Number**

Type your telephone number.



