

Key	Description
0-9	Digit keys
10	Power on/off
11	Mute
12	Previous Channel
13	One digit/Two digit
14	Freeze image
15	Reset the resolution
16*	Channel up
17*	Channel down
18*	Volume down
19*	Volume up
20*	Menu item----To enter the submenu/Confirm
21	OSDStatus(source inputs, AV system, resolution, flash rate, version information).
22	Switch(TV、PC、Composite、S-VIDEO)

Note: 1. Button with "*" is the double functions button. For more information please refer as follow.

2. Press "OSD" button, if don't know the LCD TV BOX status.

Menu Details

Note: When you first use LCD TV BOX, please first select SEARCH item in MENU and press "MENU" to start one time full auto-scan all the channels.

Main Menu

Press "Menu" on remote to enter menu setting, press "▲" or "▼" to choose the location of cursor, press "MENU" again to enter submenu, adjust "+" or "-" to change setting. Press "Exit" to exit menu.




5

Press "▲" or "▼" to choose the right location, adjust "+" or "-", the image will be changed.

You also can choose "Default" to set all color setting to default value.

Press "▲" or "▼" to choose "Default" item then press "Menu" to confirm.

Press "▲" or "▼" to choose "Return" item in list, press "Menu" to return menu mode.

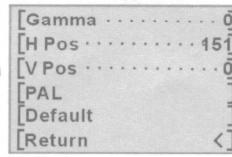

Channel Item

Note: The channel submenu is work only in TV status.

Press "▲" or "▼" to choose the channel item, press "Menu" to enter color submenu.

Auto scan: Take auto scan channel action (high speed, recommended). This procedure will takes 2-3 minutes

Full scan: Take full frequency scan (low speed). This procedure will takes 10-15 minutes. Be recommended when the weak signal or loss channels.

Press "▲" or "▼" to choose the right location to press "Menu" to confirm. When processing there will be image display, and the status light on box no blinking. After that you can watch TV as TV set.

Skip: Skip the current channel form continuous channel tune, TV Box jump to the next available channel automatically.


Restore: Restore the current channel to the continuous channel tune.

Press "▲" or "▼" to choose the right item then press "Menu" to confirm.

Fine tune: Finely adjust the frequency of the current channel

Press "▲" or "▼" to choose "Fine tune" item, then press "+" or "-" to change current status, the image will be changed.

Press "▲" or "▼" to choose "Return" item in list, press "Menu" to return menu mode.

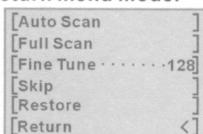

Note: When full auto-scan channels, press "+" or "-" to stop processing, if you want.

Display Item

Press "▲" or "▼" to choose the display item, press "Menu" to enter color submenu.

There are 8 modes OSD status:

7

Color Item


Press "▲" or "▼" to choose the color item, press "Menu" to enter color submenu.

You can adjust the Brightness, Contrast, Saturation, Hue, Horizontal Sharp, Vertical Sharp.

Press "▲" or "▼" to choose the right location, adjust "+" or "-", the image will be changed.

You also can choose "Default" to set all color setting to default value. Press "▲" or "▼" to choose "Default" item then press "Menu" to confirm.

Press "▲" or "▼" to choose "Return" item in list, press "Menu" to return menu mode.

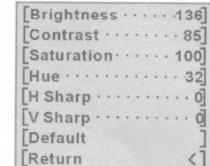

Audio Item

Press "▲" or "▼" to choose the audio item, press "Menu" to enter color submenu.

You can adjust Left Atten, Right Atten, Treble, Bass and Loudness.

Press "▲" or "▼" to choose the right location, adjust "+" or "-", the volume will be changed.

You also can choose "Default" to set all color setting to default value. Press "▲" or "▼" to choose "Default" item then press "Menu" to confirm.

Press " " or " " to choose "Return" item in list, press "Menu" to return menu mode.



Note: Press "+" or "-" to cancel unmute when under unmute status.

6


Video Item

Press "▲" or "▼" to choose the video item, press "Menu" to enter color submenu.

You can adjust Gamma, Horizontal Position, Vertical Position.

Please choose the right PAL\NTSC\SECAM system.

Press "▲" or "▼" to choose "Return" item in list, press "Menu" to return menu mode.

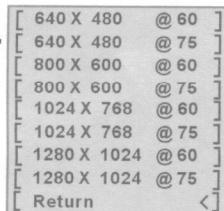

Press "▲" or "▼" to choose one resolution you want, press "MENU" to confirm. Then press "MENU" again.

Note: Select one resolution you want, press "MENU" to confirm. If not, system will be returned to default value 10s later.

Press "▲" or "▼" to choose "Return" item in list, press "Menu" to return menu mode.



Language Item

Press "▲" or "▼" to choose the language item, press "Menu" to enter color submenu.

There are 6 kinds of languages as follow:

Press "▲" or "▼" to choose the language you prefer, press "Menu" to confirm, then return main menu, the OSD be changed also.

Note: The right item with red color and sparkling, the status LED will blinking when on processing

Note: The right item with red color and sparkling, the status LED will blinking when on processing

Troubles Shooting

No picture、No sound

Power LED off, please check the power connector;

Power LED on, the LCD TV Box under PC status.

Picture is OK、No sound

Wrong sound device connection; Unmute; volume is lower to the end of minimum

Sound is OK, No picture

Check connection between monitor and LCD TV BOX;

PC no picture & unnormally

Check "Y" VGA cable connection: Check PC work well; Check whether you select the high resolution;

Check whether LCD TV Box under PC status

Remote problems

Whether battery correct installation; Check the power; Check whether low power of battery; Check if too much dust on the sender

No Color

TV cable signal is too weak; Check the Saturation setting; whether troubles in launcher; Whether the encrypt channels

8