 [目次へ戻る](#)

Microstar International BIOS

URL: <http://www.msi.com.tw/>

'**1** Fšeff [f^, i' ~ i CE , í A "A • Ê, ì' f, è, ð, È, ç, ©, -, è, » , ê, ¼, ê, ÌŠJ" -
f [fj] [, É < A ' ® , µ, Û , · B


'**2** FŽû ~ ^ ŠeŽĐ, ", æ, ÑDOS/V POWER
REPORT • Ò W • " , Å, Í AfAfbfvff [fg, É, æ, é
, ç, ©, È, é 'ŠQ, ÉŠÖ, µ, Ä, à ^ ê Ø Ó " C, ð • % , ç, Û, ¹, ñ, Ì, Å, , ç, ©, ¶, ß, ² — ¹ ³, -
, ¾, ³, ç B


NEW! V < K, ÉŽû ~ ^ , ¾, È, ½ BIOS

UP! X V, ¾, È, ½ BIOS

 **ft [fefBfŠfefB ^ fhfLf... f] "fg**

BIOS AfbvfjofjCE [fh, ÉŠÖ, , é ' ^ ÓŽ - € i % op • ¶ j] @

 DISC2:\BIOS\MSI\README {button ,EF(`..\MENUDATA\IMPVIEW', `MSI\README\README.TXT', 1)} [à-¾, ð • Ž!](#)

 **fhf % of Cfo**

 **MS-5169**


AGP VxD Driver Ver 1.10 @ **UP!**

 DISC2:\BIOS\MSI\596AGP11 {button ,EF(`..\MENUDATA\IMPVIEW', `MSI\596AGP11\README.TXT', 1)} [à-¾, ð • Ž!](#)

IDE Driver Ver 2.81 Windows 95 ^ WindowsNT 4.0 @ **UP!**


 DISC2:\BIOS\MSI\569V281 {button ,EF(`..\MENUDATA\IMPVIEW', `MSI\569V281\README.TXT', 1)} [à-¾, ð • Ž!](#)

PIIX4FIX @

 DISC2:\BIOS\MSI\PIIX4FIX {button ,EF(`..\MENUDATA\IMPVIEW', `MSI\PIIX4FIX\README.TXT', 1)} [à-¾, ð • Ž!](#)

 **MS-5167 ^ MS-5164 ^ MS-5163**

Ali Bus Master IDE Driver Windows 95 @

 DISC2:\BIOS\MSI\WIN95 {button ,EF(`..\MENUDATA\IMPVIEW', `MSI\WIN95\README.TXT', 1)} [à-¾, ð • Ž!](#)

Ali Bus Master IDE Driver WindowsNT 4.0 @

 DISC2:\BIOS\MSI\WINNT40 {button ,EF(`..\MENUDATA\IMPVIEW', `MSI\

WINNT40\README.TXT',1)} à-¾,ð·Ž!

MS-5172 ^MS-5168

IDE Driver Ver 2.01A@

DISC2:\BIOS\MSI\5172IDE {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\5172IDE\README.TXT',1)} à-¾,ð·Ž!

Pentium II f}fU[f{[fh

MS-6111

AMI BIOS A6111MS V1.4 041598@ **UP!**

DISC2:\BIOS\MSI\A611MS14 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\A611MS14\README.TXT',1)} à-¾,ð·Ž!

MS-6114

AMI BIOS A6114MS V1.4 041698@ **UP!**

DISC2:\BIOS\MSI\A614MS14 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\A614MS14\README.TXT',1)} à-¾,ð·Ž!

MS-6116

M/B WITH CPU PLUG N' PLAY FUNCTION AMI BIOS A6116MJ V1.0 051298@ **NEW!**

DISC2:\BIOS\MSI\A616MJ10 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\A616MJ10\README.TXT',1)} à-¾,ð·Ž!

M/B WITH CPU PLUG N' PLAY FUNCTION AWARD BIOS W6116MJ V1.1 042998@ **UP!**

DISC2:\BIOS\MSI\W616MJ11 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\W616MJ11\README.TXT',1)} à-¾,ð·Ž!

STANDARD M/B AWARD BIOS W6116MS V1.1 042998@ **UP!**

DISC2:\BIOS\MSI\W616MS11 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\W616MS11\README.TXT',1)} à-¾,ð·Ž!

MS-6118

AWARD BIOS W6118MS V1.1 041498@ **UP!**

DISC2:\BIOS\MSI\W618MS11 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\W618MS11\README.TXT',1)} à-¾,ð·Ž!

AMI BIOS A6118MS V1.1 042498 @ **UP!**

 DISC2:\BIOS\MSI\A618MS11 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\A618MS11\README.TXT',1)} [à-¾,ð·Ž!](#)

 **MS-6119**

AMI BIOS A6119MS V1.0 050798 @ **NEW!**

 DISC2:\BIOS\MSI\A619MS10 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\A619MS10\README.TXT',1)} [à-¾,ð·Ž!](#)

M/B WITH CPU PLUG N' PLAY FUNCTION AMI BIOS A6119MJ V1.0 050798 @ **NEW!**

 DISC2:\BIOS\MSI\A619MJ10 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\A619MJ10\README.TXT',1)} [à-¾,ð·Ž!](#)

M/B WITH CPU PLUG N' PLAY FUNCTION AWARD BIOS W6119MJ V1.1 042998 @ **UP!**

 DISC2:\BIOS\MSI\W619MJ11 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\W619MJ11\README.TXT',1)} [à-¾,ð·Ž!](#)

STANDARD M/B AWARD BIOS W6119MS V1.1 042998 @ 



 DISC2:\BIOS\MSI\W619MS11 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\W619MS11\README.TXT',1)} [à-¾,ð·Ž!](#)

 **MS-6120**

AMI BIOS A6120MS V1.1 050798 @ 



 DISC2:\BIOS\MSI\A620MS11 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\A620MS11\README.TXT',1)} [à-¾,ð·Ž!](#)

 **MS-6122**

AMI BIOS A6122MS V1.0 041498 @ 



 DISC2:\BIOS\MSI\A622MS10 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\A622MS10\README.TXT',1)} [à-¾,ð·Ž!](#)

AWARD BIOS W6122MS V1.0 050598 @ 



DISC2:\BIOS\MSI\W622MS10 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\W622MS10\README.TXT',1)} à-¾,ð·\Ž!

MS-6126
AWARD BIOS W6126MS V1.0 032498 @



DISC2:\BIOS\MSI\W626MS11 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\W626MS11\README.TXT',1)} à-¾,ð·\Ž!

Pentium f}fU[f{[fh
MS-5148
AWARD BIOS W5148MS V2.3 040998 @



DISC2:\BIOS\MSI\W548MS23 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\W548MS23\README.TXT',1)} à-¾,ð·\Ž!

MS-5169
AMI BIOS A5169MS V1.3 051298 (FOR VER 1.X MAINBOARD) @



DISC2:\BIOS\MSI\A569MS13 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\A569MS13\README.TXT',1)} à-¾,ð·\Ž!

AMI BIOS A5169MS V2.1 051298 (FOR VER 2.X MAINBOARD) @



DISC2:\BIOS\MSI\A569MS21 {button ,EF(`..\MENUDATA\IMPVIEW',`MSI\A569MS21\README.TXT',1)} à-¾,ð·\Ž!

