

Change cursor color.

Change color of the cursor body.

Change red color of the cursor body.

Change green color of the cursor body.

Change blue color of the cursor body.

Change color of the cursor outline.

Change red color of the cursor outline.

Change green color of the cursor outline.

Change blue color of the cursor outline.

Change screen position.  
Change and test refresh rate.

Move screen to original position.

Move screen down.

Move screen up.

Move screen right.

Move screen left.

Change refresh rate.

Test refresh rate.

Graph Gamma, Brightness and Contrast curve.

Adjust Gamma.

Adjust Brightness.

Adjust Contrast.

Adjust RGB colors.

Adjust red color component.

Adjust green color component.

Adjust blue color component.

Save palette to file.

Load palette from file.

Set default color palette.

Reverse color palette.

Check to enable TV output.

Check to enable flicker free mode.

Check to enable high contrast.

Select for PAL TV format.

Select for NTSC TV format.

Use to adjust brightness.

Push to move TV screen up.

Push to move TV screen down.

Push to reset TV screen to center.

Push to move TV screen right.

Push to move TV screen left.

Check to enable overscan mode.

Extend screen width.

Reduce screen width.

Extend screen height.

Reduce screen height.

Adjust refresh rate in custom mode.

Change screen size.

Extend screen to original size.

