

# **The Recording Control**

## **Introduction**

The Recording Control enables you to regulate the recording level and stereo balance from multiple sources. You use the Recording Control with the Audio Recorder or Extended Recorder during recording.

[Starting the Recording Control](#)

[The Recording Control Window](#)

[Recording Control Menu Commands](#)

## **Starting the Recording Control**

(Windows3.1,3.11) Open the Audio Applications program group and double-click the Recording Control icon.

(Windows95) Open the Audio Applications folder (normally it is Pcaudio folder) and double-click the Reccntrl icon.

OR:

(Windows3.1,3.11,95) from the Audio Recorder or Extended Options menu, select **Recording Control** command.

The Recording Control window appears.

## The Recording Control Window

The Recording Control displays recording level and stereo balance controls for each of your computer's available hardware sources.

**Note: CD and AuxB are not supported by this product.**

- To include a recording source, click its name.
- To adjust the stereo balance of any source, drag its top horizontal sliding bar left or right.
- To adjust the recording level of a source, drag its vertical sliding bar up or down.
- To monitor a recording in progress, click **Record Monitor**.

## **Recording Control Menu Commands**

Turn on **Always On Top** to display the Recording Control on top of other windows.

**Help** displays information about how to use Recording Control.

**About Recording Control** gives the version number and copyright information.

