

Abs

Absolute value function. The absolute value of a negative number is equal to the number multiplied by (-1). The absolute value of a positive number is equal to the number itself.

Default parameter values:

$a = 1, b = 1, c = 0$

Example:

$a = 1, b = 1, c = 0$

Input = - 5.3 => Output =
5.3

Input = 10.7 => Output =
10.7