

About Alter Resolution Explanation

Items

[Resolution](#)
[Scan](#)
[Big Screen](#)
[Shortcut](#)
[Colors](#)
[Font Size](#)
[Restart](#)
[Change](#)
[Test](#)
[Shortcut List](#)

Changes display (Windows) resolution , number of colors, and mode. Any changes made will not be in effect until clicking (Windows) restart button.

Resolution

Selects a display resolution.

1600 x 1200	(60Hz)	Ni
1600 x 1200	(96Hz)	i
1280 x 1024	(60Hz)	Ni
1280 x 1024	(70Hz)	NiFF
1280 x 1024	(87Hz)	i
1152 x 864	(60Hz)	Ni
1152 x 864	(70Hz)	NiFF
1152 x 864	(75Hz)	NiFF
1024 x 768	(60Hz)	Ni
1024 x 768	(70Hz)	NiFF
1024 x 768	(75Hz)	NiFF
1024 x 768	(87Hz)	i
800 x 600	(56Hz)	Ni
800 x 600	(60Hz)	Ni
800 x 600	(75Hz)	NiFF
640 x 480	(60Hz)	Ni
640 x 480	(75Hz)	NiFF

Scan

Selects a refresh rate.

Big Screen

Selects a virtual desktop size.

	4MB Card	2MB Card	
256 colors		1600 x 1200	1600 x 1200
64K colors		1280 x 1024	1024 x 768
16M colors(24)	1152 x 864		800 x 600
16M colors(32)	1024 x 768		800 x 600

Big Screen size should be greater than or equal to Resolution size.

Shortcut

Selects a shortcut key.

Colors

Selects color depths of 256,64K and 16M colors.

Resolution	4MB Card	2MB Card
1600 x 1200	256	256
1280 x 1024	256/64K	256
1152 x 864	256/64K/16M(24)	256
1024 x 768	256/64K/16M(24)/16M(32)	256/64K
800 x 600	256/64K/16M(24)/16M(32)	256/64K/16M(24)/16M(32)
640 x 480	256/64K/16M(24)/16M(32)	256/64K/16M(24)/16M(32)

Font Size

Selects font size of small and large.

Restart

Restarts Windows.

Change

Shows dynamic resolution changes.

Test

Automatically switches your monitor to display the selected mode without exiting this control panel, press ESC key or Cancel button to end test.

Shortcut List

Lists shortcut keys.