NEXTSTEP for Intel Processors

Title: AST Power Premium

Entry Number: 1123

Last Updated: << Date June 13 1995>>

Product Vendor:

AST

+1 (800) 876 4278 USA toll-free (customer information center) phone

+1 (800) 727 1278 USA toll-free (technical support) phone

+1 (800) 876 4278 USA toll-free faxback system

Keywords: AST, Power, Premium

Overview:

The AST Power Premium provides integrated VGA with 640 x 480 2 bit grayscale and EISA expandability.

Setup and Installation:

The Quality Assurance Group successfully installed NEXTSTEP Release 3.1 onto an AST Power Premium with the configuration outlined below. There are two separate means whereby this system may be configured. These are the ROM setup utility and the EISA Configuration Utility. Some configuration values may be changed in both utilities.

To invoke the ROM setup utility press <ctrl> <alt> <esc> early in the boot process. The ROM setup utility allows you to change the time and date as well as access a menu of advanced options. You should only be concerned with the advanced options settings during the installation process.

ROM Configuration Settings

```
Advanced Options
    Floppy and Boot
       Floppy Drives
           Floppy-Disk Adapter : Integrated
           Floppy Disk A: 1.44MB 3.5"
           Floppy Disk B : None
       Boot Options
           Boot Device: Try Floppy First
           Keyboard Error : Ignore
           NumLock: On at Boot
           Default Speed : High
    Hard Drives
       Hard-Disk Adapter : Add-in
       First Hard-Disk Type: None
           Heads:
           Cylinders:
           Sectors Per Track:
           Write Precomp:
           Landing Zone :
       Second Hard-Disk Type: None
           Heads:
           Cylinders:
           Sectors Per Track:
           Write Precomp:
           Landing Zone :
    Video and Memory
       Video
           Primary Video : Color
           Video Adapter : EGA-VGA
           800 x 600 Mode : 72 Hz non-interlaced
           1024 x 768 Mode : 72 Hz non-interlaced
       Memorv
           Conventional Memory: 640 KB
           Extended Memory: 15616 KB (15.25 MB)
           Reserved Memory: 128 KB
           Cache Memory : Enable
```

```
Limit Memory Access to 16 MB: Disable
Coprocessor and Ports
   Coprocessor
       Math Copr. Type: None
       Parallel Port: 378h, IRQ 7
   Ports
       Serial Ports: Port 1=3F8h, 2 disabled
   Mouse
       Integrated Mouse Port : Enabled
Security
   Password
       User Security: None
       Password:
       Verify:
Update BIOS
   Revision
       BIOS : 1.06
       Keyboard Controller: 1.02
       BIOS Loader: 1.00
```

The following settings were recorded from the EISA Configuration Utility on this system. This system was running NEXTSTEP off of a SCSI hard disk using the integrated VGA for the display.

EISA Configuration Utility Settings

```
System AST Power Premium System Board
Parallel Port Configuration
Parallel Port: 378h, IRQ 7
Serial Ports: Port 1=3F8h, 2 disabled
Floppy-Disk Adapter: Integrated
Floppy-Disk Type
Floppy Disk A: 1.44 MB 3.5 "
Floppy Disk B: None
Hard-Disk Adapter: Add-in
Hard-Disk Type
First Hard-Disk Type: None
Second Hard-Disk Type: None
```

```
User Defined Type for First Hard-Disk
       Number of Heads (1--16): 1
       Number of Cylinders (1--1024): 989
       Number of Sectors Per Track (1--63): 35
       Write Precompensation (1--1023): 988
       Landing Zone (1--1024): 1
   User Defined Type for Second Hard-Disk
       Number of Heads (1--16):
       Number of Cylinders (1--1024):
       Number of Sectors Per Track (1--63) :
       Write Precompensation (1--1023):
       Landing Zone (1--1024):
Video Adapter : EGA-VGA
Integrated Mouse Port : Enable
CPU - Type: 80486 DX2, Speed 50MHz
Math Coprocessor Type : None
Memory Configuration
   Conventional Memory: 640 KB
   Processor Board Memory: 16M
   Limit Access to 16 MB : Disable
   Cache Memory : Enable
Integrated VGA Video Output
   800 x 600 Mode : 72 Hz non-interlaced
   1024 x 768 Mode: 72 Hz non-interlaced
Slot 3 - AST Processor Board: Auto Added
Embedded - AST Integrated VGA: Auto Added
   Integrated VGA - Enable : Color Display
```

Known Problems:

Releases 3.1:

During installation, the NEXTSTEP boot floppy should be ejected after the kernel has been loaded and messages are displayed describing the various probes the kernel is performing. The floppy drive activity light will be off at this point. If the floppy ejected the system will hang as the floppy drive is probed.