

# **Sending; 355914\_SCSI.tiff 355914\_SCSI.tiff SCSI Devices**

205923\_PixelRule.tiff 355914\_SCSI.tiff

## **355914\_SCSI.tiff SCSI Devices**

VL Bus

### **Supported Hardware:**

BusLogic BT-445C VL SCSI Adapter

This driver supports the BusLogic BT-445C VL SCSI Host Adapter.

Before you install a BT-445C VL SCSI Host Adapter, you must first run the Configure application to configure the driver. Be sure to write down the settings for DMA channel, IRQ, and Port Address obtained from the Configure Application before you install the host adapter itself.

### **Installing a BusLogic BT-445C VL SCSI Adapter**

1. Refer to the "User's Guide" that comes with the adapter. This manual contains information that you should read before installing the adapter.
2. The BT-445C's I/O address is configured via DIP switches; the IRQ is configured via the board's Auto-SCSI program which is available at boot time. Configure these three parameters to match the values selected in the configure App, as described above.
3. Be aware of the necessity of proper SCSI termination. Refer to the User's Guide and configure the host adapter accordingly.
4. Install the BT-445C VL SCSI Adapter in a VL bus slot.
5. Restart your computer. It will use the new adapter as you configured it.

475903\_PixelRule.tiff ↗

## See also

- "Add a Device" in Configure's on-line help.
- See NeXTanswer 1824 for general information on installing and configuring device drivers.
- See NeXTanswer 1771 for an overview of this BusLogic

device driver.