

SMC Ethercard Plus Elite16 Ethernet Adapter

PixelRule1.tiff ,

Network Devices Network.tiff ,

This device driver is designed to run on an Intel-based computer running OPENSTEP™ for Mach Release 4.0.

Supported Hardware:

SMC EtherCard Plus Elite16 Adapter

This driver supports the SMC EtherCard Plus Elite16 Ethernet Adapters based on the SMC 83C690 LAN processor. It uses the full 16K bytes of memory available on the adapter.

Installation and Configuration Steps:

1. Install the adapter in the system, and run the **EZStart** provided with your adapter to ensure that the adapter is functioning correctly. Consult the adapter documentation for more information.
2. Reboot, log in as root, and run Configure.
3. Click on the Network Devices icon at the top of Configure's "Summary of Devices" window. In the Add Network Devices panel that opens, click the "Show All Installed Drivers" radio button, if it is not already highlighted.
4. Select "SMC EtherCard Plus Elite16 Ethernet Adapter" from the list, and click Add.
5. Choose an I/O Base Address, IRQ, and Shared RAM Base

- address which do not conflict with other devices on the system.
6. Click Done, then click Save, then quit Configure.

PixelRule2.tiff ,

See also

- "Add a Device" in Configure's on-line help.
- See NeXTanswer 1824 for general information on installing and configuring device drivers.