Last modified: 07-02-96

Setting up Stampede to Dial-In to Prestige

Description:

Windows 3.1 workstation using Stampede Remote Office with an ISDN TA to call a Prestige 2864I to route IP and/or IPX.



- I. Setup workstation
 - 1. Insert the Stampede setup disk and run the setup program. Follow the install procedure provided by Stampede.

LAN Operating System					
Select the Lan Operating system that you intend to use with this Remote Office client.					
Netware and OnNet TCP/IP Gold					
♦ OnNet TCP/IP Gold					
♦ Netware					
♦ Other:					
<u>S</u> elect					
<u>Previous</u> <u>Continue</u> E <u>x</u> it					

Netware Authentication			
The Netware login process requires a preferred server name and username. You may also specify a password. If the password is not specified now, it will be asked for at login time.			
<u>S</u> erver Name	1st_server		
<u>U</u> ser Name	mknapp		
P <u>a</u> ssword	·····		
Previous	<u>Continue</u> E <u>x</u> it		

Modems				
Select the modem from the list that most closely matches the modem that you have attached to your serial port. If you want Setup to find your modem for you, make sure it is turned on and then select Auto Detect.				
Xircom CreditCard 28.8 Zoom/Modem VP V.32bis Zoom/Modem V.34 Zoom 28.8 VFX ZypCom Z32b-PX ZypCom Z32b-SX ZyXel U-1496 +				
<u>Previous</u> <u>Continue</u> E <u>x</u> it				

2. At this menu you should select the terminal adapter you have on the remote site (the computer you are installing this to)

Communication Server Authentication			
Enter your user name and password. Your user name and password must match the user name and password that have been set up on the communication server you want to connect to. Set the password to '*' if you want to be prompted for the password during a login. Enter the phone number that your modem should dial to connect to a comm server. The user name, the password, and the phone number will be stored as a phonebook record called "COMM_SERVER".			
P <u>h</u> one Number			
<u>U</u> ser Name	Matthew		
P <u>a</u> ssword	****		
Previous Continue Exit			

Install will now copy the files needed.

3. Upon reboot you should type "rostart" to start windows and to start remote office. You will see this screen. Select "Ports".

😑 Remote Office Client 🔽						
<u>File</u> Option	<u>File Options Status H</u> elp					
Connected To Call Duration Port Port S				IS		
	Ct Phone	jook User Bu	tton #1	on #2		
<u>N</u> etwo	rk Remote C	control	ts	Exit		

4. If your terminal adapter is not included in the preconfigured list, put your terminal adapter's init string in here. The Motorolla Bitsurfer's init string, which is not included as an option, is seen above Click on "OK" when done to go back to the Remote Office Client menu.

_	Ports and Modems				
Port:	COM2	lrg: 3	1/0 <u>A</u> ddr:	02F8 🛨	🖌 ок
🗹 A	c <u>t</u> ivate Port when Remote (Office loads			
• 🗆	Modem speaker off				
Mo <u>d</u>	Modem: Sonix Volante ISDN T/A 🖭 Modem Strings			Baud Rate	
Mod				1200 2400	🛛 🛛 Help
<u>I</u> nit	AT@B0=1!C1=2%	A4=0		4800 9600	
Ans	wer: ATSO=1			19200 38400	
Dia	; ATD			57600 115200	
Hai	ng Up: ~+++~ATHO			Tty	

5. From the Remote Office menu select "Connect" and then select "Protocol"

Connect to Communication Server				
Phonebook <u>N</u> ame:	COMM_SER	VER	±	и ок
P <u>h</u> one Number:	5552000			
Callbac <u>k</u> Number:				
Por <u>t</u> :	COM2	±		
Inactivity Timeout	0			
<u>Connect Limeout</u>				
Baud Rate Overric	le: NONE 🛨	Current Baud Rate	: 115200	
🗹 Auto <u>R</u> econnec	✓ Auto <u>R</u> econnect			
<u>S</u> ecurity	Protocol	Network <u>L</u> ogin	Launch <u>A</u> pps	

If using an IPX network, select IPX for the NCP. Make sure to set the network number to 0. This is very important because the prestige needs to set the network number when negotiating. Click "OK" when done to return to the Connection menu.

Network Control Protocol Options			
Choose one or more protocols ↓ Select NCP to configure ✓ 1. IPX 2. IP 3. BCP	IPX Options Network Number: 00000000 Node Address: 00000000001 CIPX Compression SPX Session Spoofing		
	Ad <u>v</u> anced		
/	IK KCancel Relp		

7. From the connection menu select "OK". This will dial your call.