

## Contents for Panasonic KX-P6500/P6300/P6100 GDI Options Help

The Options provides advanced GDI features, such as duplex, overlay, and reverse order printing. To gain access to these features, click the **Use Panasonic KX-P6X00 Print Manager**.

### Duplex Printing:

The **Manual Duplexing** features allows double-sided printing of your file. The printer will print every other page first, for example pages 1, 3, 5, and so on. The KX-P6500/P6300/P6100 printer will request you reinsert the printed pages and the printer will print the even numbered pages, for example pages 2, 4, 6, and so on. Off will disable Manual Duplexing. There are two manual duplex formatting options ([Book](#), [Report](#)).

Select **Print Instruction Page** to cause the printer to print a duplex instruction page at the end of the initial printing. This page provides instructions and input paper orientation to show you how to turn and reinsert the printed pages. Insert the instruction page along with your printed pages. The printer will feed the instruction page through the printer before printing your print pages.

### Scaling:

**Scaling** is used to reduce or enlarge output on the printed page. Valid scale ranges from 10% to 200%. Click on the arrows to increase or reduce the setting or enter a number in the text box.

### Print to File:

This selection is used to print your output to a file instead of to the printer. This is useful if you want to print from a file later, or print the identical file again later. You can also use **Print To File** to create an overlay form. The overlay print file is stored in GDI format. Use the **Add** button on the **Local Queue** of the **KX-P6X00 Console** to print from a file.

### Buttons

[OK](#)

[Cancel](#)

[Image](#)

[Overlay](#)

[Default](#)

[Help](#)

[Browse](#)

## **Book**

Used to print so that if you open the document in the manner of a book, page 2 and 3 face each other.

## **Report**

Used to print so that the even-numbered pages are upside down, so that if you open the document in the manner of a report that is bound at the top, such as a clip board, where pages 2 and 3 face same way.

**OK**

Click on **OK** to make your changes take effect and return to the previous screen.

## **Cancel**

Click on ***Cancel*** to ignore any changes you have made and return to the previous screen.

## Default

Click on ***Default*** to restore option settings to their default values.

## **Help**

*Help* provides detailed help on the GDI Options screen.

## **Browse**

After selecting ***File Name***, clicking ***Browse*** will let you search for your GDI file in the file system.



## Image

The **Image options** screen lets you adjust the appearance of images you wish to output. These adjustments only apply to certain types of images and gray scale drawings, not to text or black line drawings. See the Toner Saving (TonrSavR) section for information on lightening the appearance of text and some line art. The displayed figure will change as you move the controls to give you a rough idea of the effect of your adjustments.

### **Brightness Control:**

Drag the **Brightness** knob or click on the arrows to vary the shades of gray, making the image output appear lighter or darker.

### **Contrast Control:**

Drag the **Contrast** knob or click on the arrows to make the image output appear sharper or smoother.

Note:

These settings are *resolution-dependent*. This means if you change the resolution via the Print Quality option on the Setup screen, you may need to return to this screen to adjust the **Brightness** and **Contrast** settings for the new resolution.

This feature may not be effective for some applications.

### **Buttons**

[OK](#)

[Cancel](#)

[Default](#)

## **Default**

Click On ***Default*** to restore Image settings to their default values.

## Overlay

The **Overlay Options** screen is one of the most powerful features of the KX-P6500/P6300/P6100 software. The feature lets you overlay an image on top of any document printed in GDI print mode.

You can use this feature to:

- \* Incorporate your letterhead on the first page of a business letter.
- \* Print your logo at the bottom of each page of a set of presentation slides.
- \* Overlay the word "Confidential" on every page of an important document.
- \* Print a special cover page or trailer page for each print job.

### **Print Cover Page:**

Select this feature to print a cover page on a separate page before the remainder of your document.

### **Print Trailer Page:**

Select this feature to print a trailer page on a separate page after the document has been printed.

### **Print Overlay:**

This feature will overlay your image on the pages of your document. The effect is similar to printing your image on a transparency, then putting the transparency over your document.

Select 1st to overlay the image only on the first page of the document.

Select All to overlay the image on each page in the document.

Select From to overlay the image on a range of pages within the document.

### **Buttons**

[OK](#)

[Cancel](#)

[Browse](#)

[Help](#)

## **Browse**

After selecting *Print Cover Page*, *Print Trailer Page*, or *Print Overlay*, clicking **Browse** will let you search for your GDI file in the file system.

## **Help**

*Help* provides detailed help on the Overlay features screen.

