



## **Removing the Top Cover**


1- Open the top cover.

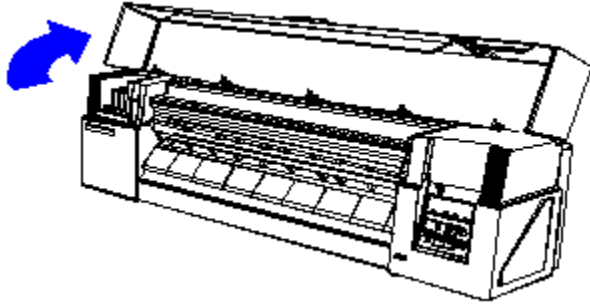

2- Push the right-hand side of the cover slightly back, so that the rightmost hinge uncouples.

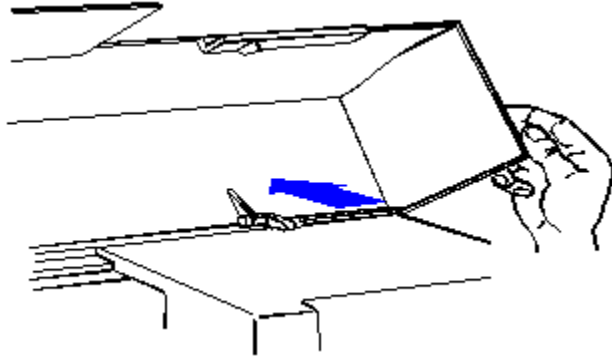

3- Slide the cover to the left, so that the other hinges uncouple.

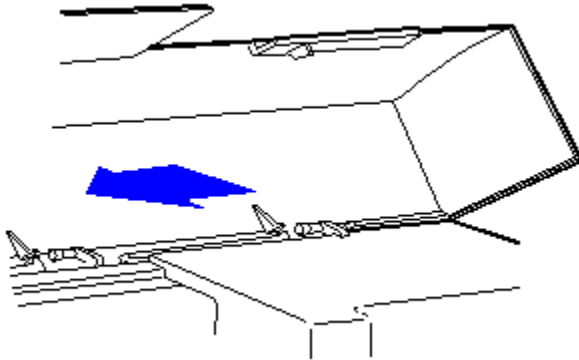

### **Reassembling:**

*Close the cover, and click each hinge into place.*

4- Remove the cover from the plotter.

