


Disconnecting the Front-Panel Assembly.

1- On the Main PCA, gently pull the front-panel connector clamp (FP) to the right to release the flat, white cable.

2- Pull the cable easily out of the clamp, and release it from the clip on the side of the electronics module.

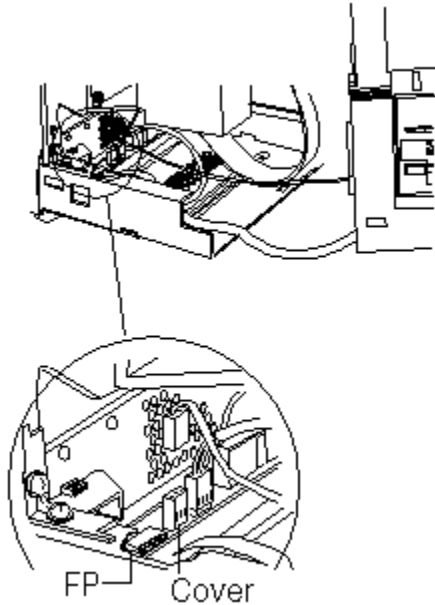

Reassembling:

The contact part of the cable faces down. Prevent tugging of the cable at the point of connection by leaving slack between the connector and the clip.

3- Detach the top-cover-sensor cable from the **cover** connector, and release it from the clip on the side of the electronics module.

