



## **Removing the left end-cover.**

1- Release the three clips at the bottom of the end-cover: first the side clip, then the front and back clips.

These may be stiff.

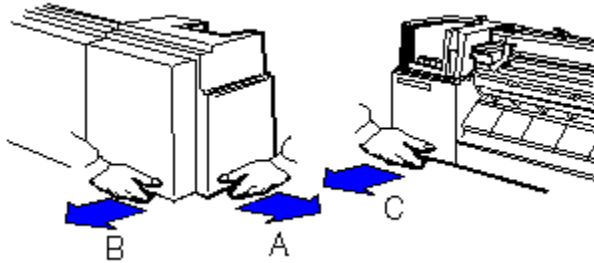

2- Pull the end-cover up, and remove it from the plotter.

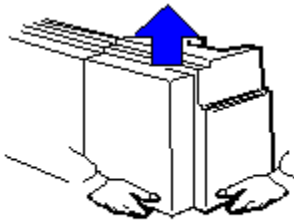

### **Reassembling:**

*It's not easy to reinstall the end-covers on the plotter. With some practice, you should learn the knack. As a guide, before you replace an end-cover, take a look at the various clips on its inside, and identify where they fit on the plotter.*

