

Reinstalling the Encoder Strip.

1- Move the cartridge carriage to the left, over the service station.


2- Ensure that the encoder strip is oriented with the transparent area up, and with two holes on the left side and one hole on the right side.



WARNING:


In the following steps, take care neither to cut yourself on the encoder strip, nor to damage the strip.

3- Feed the encoder strip through the cartridge carriage from right to left.

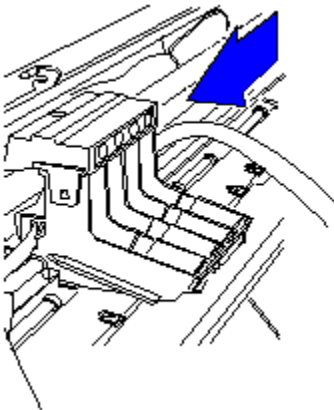


4- Temporarily, rest the loose strip safely on the drive roller.


5- Slip the left end of the strip over the plastic pin on the left bracket, and press it right to the base of the pin.

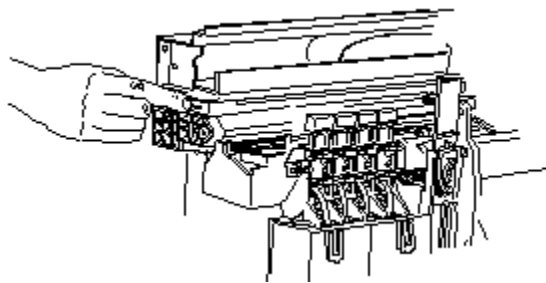

6- Loosely fit, but do not tighten, the washer and screw to retain the encoder strip.

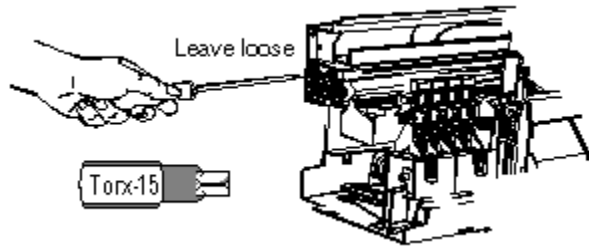


7- Press the encoder spring to the left, and slip the right end of the strip over the pin. Press the strip right to the base of the pin and slowly release the spring.

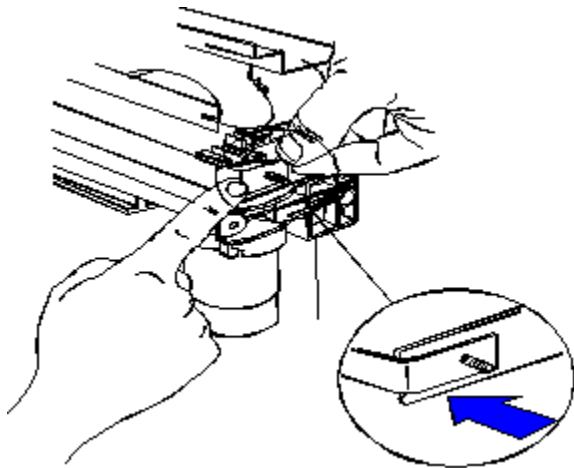


CAUTION

In the following two steps, avoid distorting the encoder strip while you tighten it.

8- Replace the washer and nut on the right side, and slightly tighten the nut.

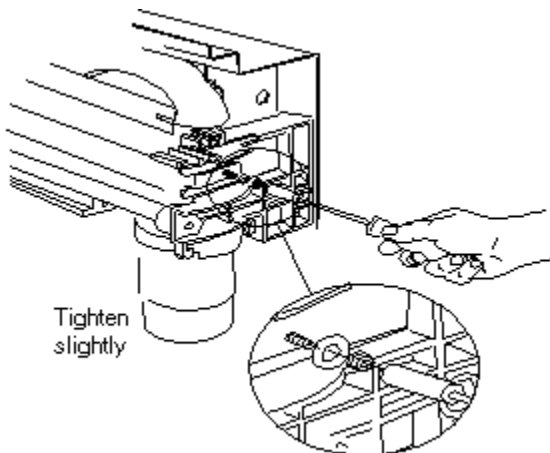

9- Slightly tighten the screw on the left side.

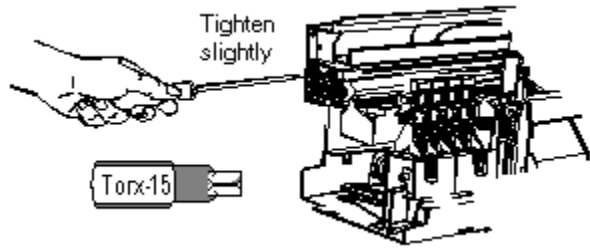

10- Slide the carriage back and forth the length of its travel to ensure free movement. The encoder strip should not bind or rub on the carriage.

