


Removing the Bail.

1- Open the cover.

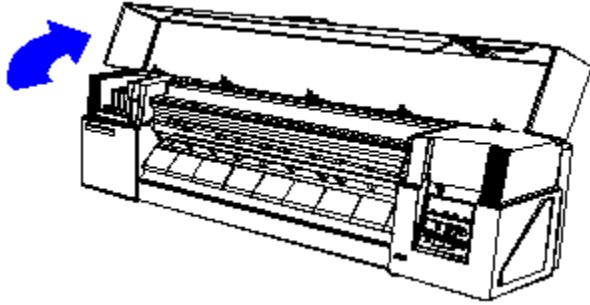

2- Move the carriage to the extreme left (in the service station).

3- Push one of the plastic ends of the bail towards the center of the plotter to release it from the hole in the sideplate, and lift the bail out of the plotter.

