



Removing the Bail-Lift Mechanism.

1-While pushing the top of the bail-gear assembly towards the front of the plotter,

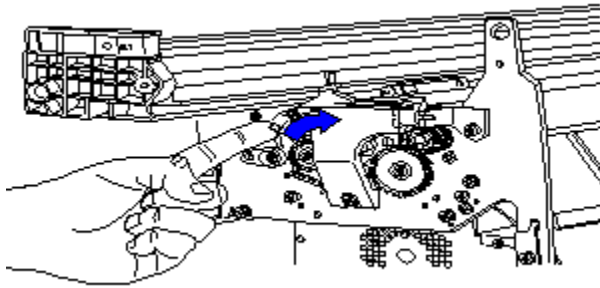


do the following:


- On the engaging lever, move the cable ball slightly towards the back of the plotter.

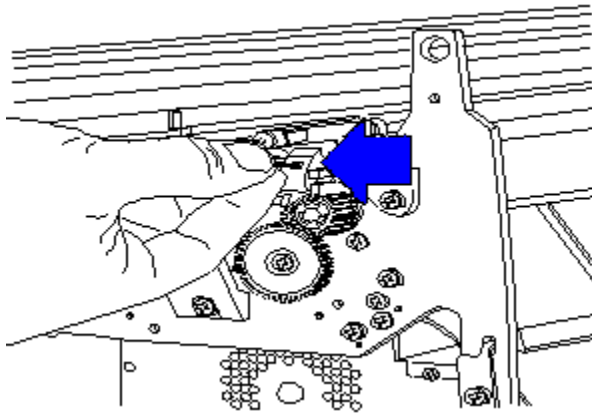


- Allow the engaging lever to move towards the left of the plotter, so that the cable comes free of the lever.

2- Release the cable from the engaging-lever support.

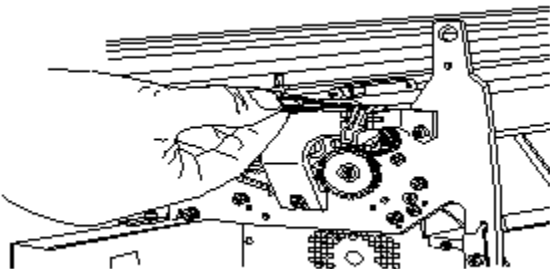


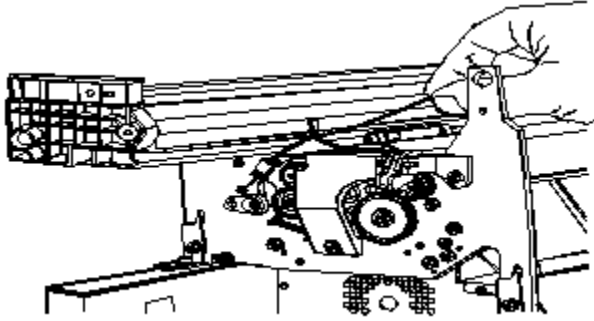


3- Release the cable from the bail-gear assembly.

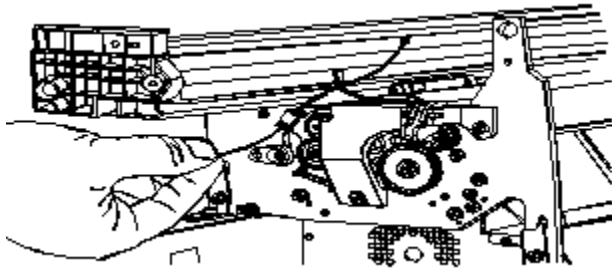


4- Remove the engaging lever

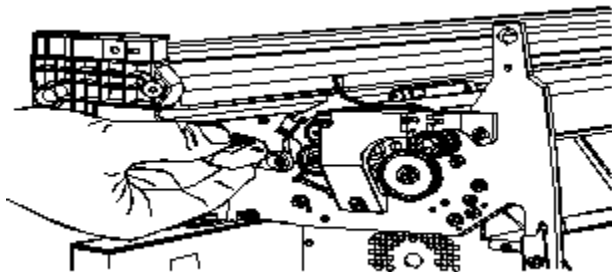

5- Remove the spring from the bail-gear assembly.

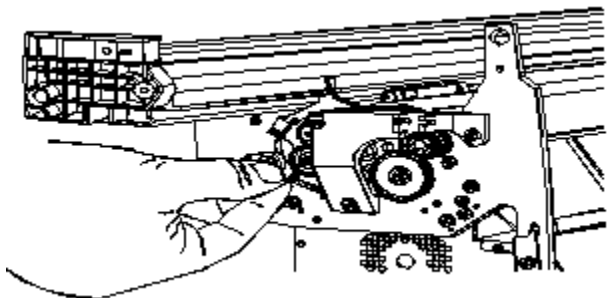


6- Loosen the screw from the top of the bail-gear assembly.

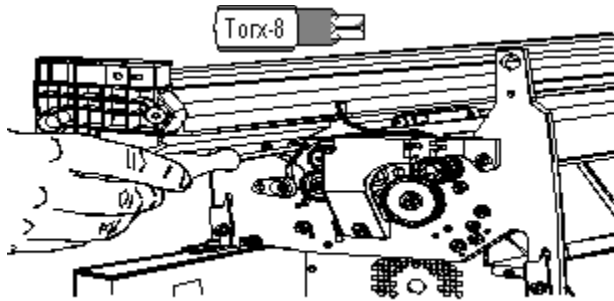

7- Remove the screw from the plastic bail gear.

Note:

You may need to hold the bail cam steady inside the side-plate at the same time. You can access the cam through the hole underneath the side-plate.

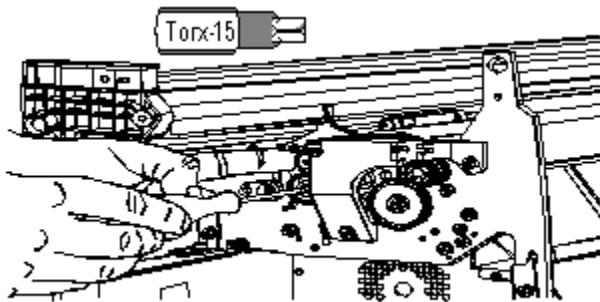

8- Pull the bail gear assembly out from the plotter.

Note:

The cam falls to the floor of the plotter.

