

**About**

Tells you which version of enotate you are using and how to contact Informal Software.

## **About the LDF file format**

LDF is a communication protocol that is used by enotate to communicate with the enotate Palm application. It describes the drawing in a propriety format that enotate stores as a document.

When you draw on the enotate Palm application, data is sent to the enotate PC application which then draws the same drawing on the PC.

The communication works from the PC to the Palm as well, which allows the Palm to show the LDF drawing that is on the PC.

The LDF drawing is separate from any graphic that you paste into enotate, so any changes that you make to the LDF do not affect the graphic.

When you send an enotate document as an email attachment, any graphic that is pasted in is sent as a LDF or JPG (see Preferences) embedded in the enotate document, along with the LDF.

**Clear Screen**

Clears the enotate document or the selected layer.

## Communication Problems

If your enotate software tells you that there is an error connecting to the Palm, then check the following:

- Is the Palm in the HotSync® Cradle?
- Is the HotSync® cradle lead plugged into your PC?
- Is the enotate.prc file installed on the Palm? If not, then refer to your Palm manual to install the enotate Palm application.
- Is the communications port set correctly? Check the Communications Port setting.

You can confirm that your Palm is communicating with your PC by using the About menu item. It tells you if enotate is connected or not.

With enotate your PC and Palm only communicate when they need to pass data. This greatly reduces battery usage on your Palm.

Because of this we recommend that you always let the actions complete on both the PC and Palm before performing further actions. For example, exiting enotate on the Palm whilst enotate on the PC is performing an action may result in data loss.

If you are still having problems, then look at the enotate web site, <http://www.informal.com> for more information.

## **Communications**

You can set enotate's com port to a different port than the one used for hotsyncing. Open **Preferences** from the **Edit** menu. Choose the port from the **Communications port** drop down menu. This setting is saved when you exit enotate.

## **Contents**

[Introduction](#)

[Using enotate](#)

[Menus](#)

[Toolbar](#)

[Using enotate on the Palm](#)

[Problems](#)

## **Copy**

Places a copy of the selected area on the Windows clipboard in bitmap format.  
If you copy and then paste an LDF part of the document, it then becomes a bitmap.

You can also use the  icon on the Toolbar.

Copies the selected area of the document. For more information, see [Copy](#).



## Copying Graphics into enotate

You can copy graphics into enotate, and then draw over them using the Palm to annotate them. Uses for this include drawing a circle around someone in a picture, or adding arrows to a map for directions.



To paste a graphic into enotate, copy it from another application onto the clipboard, and then paste it into the enotate document. The graphic appears in a blue dashed box, that you can move anywhere around the document. Graphics are always pasted into the background layer.

## **Cut**

Deletes the currently selected area and places a copy on the Windows clipboard in bitmap format.

You can also use the  icon on the Toolbar.

Cuts out the selected area of a document. For more information, see [Cut](#).

## **Edit Menu**

Clear Screen

Undo

Redo

Cut

Copy

Paste

Preferences

**Exit**

Quits enotate, and gives the option of saving changes if the current document has been modified since the last save.

## **File Menu**

New

Open

Save

Save As

Send Email

Print

Print Preview

Print Setup

Recent Files

Exit

**Help**

Contents

About

This help file.



## **Contents**

This help file.

## Introduction

enotate makes your Palm into a real-time annotation and drawing tool. When you draw on your Palm, it also appears on your PC.

If you paste a picture, such as a map, into enotate, you can draw over it. This allows you to add arrows and lines to the map, for giving directions. enotate has many other uses, limited only by your imagination. Where enotate really comes into its own is when you use it with your email software. You can create a drawing using enotate, and by using a menu item create a new email document with the drawing as an attachment. All you do is add the address and you can instantly send the drawing.

## **Menus**

[File Menu](#)

[Edit Menu](#)

[View Menu](#)

[Layers Menu](#)

[Help](#)

## **New**

Creates a new enotate document. You can only have one document open at a time. If you already have a document open when **New** was selected, then you are given the option to save it if any changes were made since the last save.

You can also use the  icon on the Toolbar.

Creates a new document. For more information see [New](#).

## Open

Opens an enotate document (.ldf) using the standard **Open** dialog box.

You can also use the  icon on the button bar.

Opens an enotate document. For more information, see Open.

## **Paste**

Copies the contents of the Windows clipboard to the top left of the current viewable area in bitmap format. It can then be moved to the required position by clicking and dragging using the left mouse button on the edge of the graphic when the cross arrows cursor appears. It retains its original file format such as DIB.

You can also use the  icon on the Toolbar.



Pastes the contents of the clipboard into the current document. For more information, see [Paste](#).

## Preferences

Allows you to set the file format used for images that have been pasted into enotate when using Save, Save As or sending an email attachment using Send Email, and for setting the com's port.

### Save imported images as:

You have two options:

- Windows DIB creates large file sizes but is a graphic is saved without any loss of detail.
- JPEG creates small file sizes, but to make the file smaller some detail is lost. This is generally not noticeable.

If the recipient has enotate, then they will be able to view the JPEG or DIB file with the annotation overlaid.

### File format for sending email:

Sets the file format that the enotate document is sent in when you use Send Email.

You have three choices:

- Prompt Asks you when you select Send Email
- JPEG The LDF part of the document is converted to a bitmap and embedded into the graphic
- LDF The document is sent in LDF format, so it can be edited by anyone who has a copy of enotate.

### Communication's port:

You can set enotate's com port to be the same as the port you use to HotSync® your Palm, or a different port from the drop down menu.

## Print

Uses the standard **Print** dialog box for printing the current enotate document. You can also choose a different printer using this dialog.

You can also use the  icon on the Toolbar.

Prints the current document. For more information, see [Print](#).

## **Print Preview**

Shows how the current document will print.

**Print Setup**

Allows you to set the printer, paper size and orientation.

## Save

Saves the enotate document, including any graphics that have been pasted into it, with the file name and in the location that you specify using the standard **Save** dialog box. If the current document has already been saved, then Save will replace the previous document with the current one.

You can save the file in different formats, which affects how it can be viewed, using the options in Preferences. If the file is saved in LDF format, it can be edited by enotate. If any other format is chosen, and LDF part of the document is converted to bitmap and embedded in the graphic.

You can also use the  icon on the Toolbar.

## **Save As**

Saves the enotate document, including any graphics that have been pasted into it, with the file name and in the location that you specify using the standard **Save As** dialog box. This allows you to change the file name and save the document in a different location on the disk.

See [Save](#) for more information about file formats and saving documents.

Saves the current document. For more information, see [Save](#).

 


**Send Email**

If you are using a MAPI compliant email program, then this command opens a new email document with the current enotate document set as an attachment, using the options set in Preferences.

## Sending a document as an email attachment

You can send a document as an email attachment from enotate by using the Send Email menu command, or Send Email from the Options menu on your Palm.

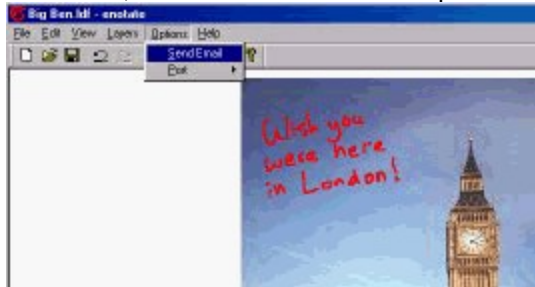

This opens your email software with a new document with the current enotate document as an attachment, using the options set in Preferences. You then send your email as normal. Your email software must be MAPI compliant, or you will not have this menu option.

**Status Bar**

Shows or hides the status bar.

## **The enotate Document**

enotate creates a document that is 3200 wide by 2400 pixels high in standard view. You can zoom in and zoom out of the document to give you different views of the document. When you scroll around a document, the red dashed drawing box moves so that it is always visible on the screen. The drawing can be erased from either the PC or the Palm application

The document can be saved, and a new document can be created at any time. You can also open a previously saved document.

The document has two layers, the background layer into which you can paste graphics, and the foreground layer where the drawing takes place. The layers can be edited separately.

**Toolbar**

Shows or hides the Toolbar. The Toolbar may also be moved by click and dragging on the Toolbar background. To put the Toolbar back to its docked position, drag it to the top of the screen.

## Toolbar



The Toolbar provides a faster way of accessing some Menu items. Click on a button to get a description of its function.

The Toolbar may also be moved by click and dragging on the Toolbar background. To put the Toolbar back to its docked position, drag it to the top of the screen.

## **Using enotate**

When you first start enotate on your PC and then enotate on your Palm, you see a document window on the PC and a drawing window on the Palm.

In the document window is a red dashed box. This is the drawing area. It is the same size as the Palm drawing area. Whatever you draw on the Palm in enotate appears here. It can be moved to a different position by clicking and dragging using the left mouse button on the edge of the box when the cross arrows cursor appears. It can also be moved by tapping the Draw button on the Palm and then dragging across the Palm screen.

When you move the box to a new location the Palm enotate drawing area shows any drawing and graphic that is in the box. If you have drawn something, moved the box to a different location and then moved the box back over your drawing, it will appear on the Palm.

You can use any of the enotate Palm application tools on your drawing, such as setting colors, erasing and different pen widths.

[Copying Graphics into enotate](#)

[Sending a Document as an Email Attachment](#)

[The enotate Document](#)

[About the LDF File Format](#)

[Setting enotates com port](#)

## Using the Color Menu

Color	Navigate	Options
Black	✓	K
Red	✓	E
Green	✓	G
Blue	✓	B
Magenta	✓	M
Gray	✓	Y
White	✓	W

The **Color** menu is accessed by using the Menu icon on your Palm. You can set the color that the lines drawn with your Palm appear on your PC. Each color also has a Palm command shortcut. The available colors with their shortcuts are shown below:

Color	Shortcut
Black	K
Red	E
Green	G
Blue	B
Magenta	M
Gray	Y
White	W



## Using the Options Menu

Color	Navigate	Options
		Clear Screen ✓/C
		Layers... ✓/F
		Undo ✓/Z
		Redo ✓/X
		Send Email ✓/S
		Preferences ✓/R
		Help ✓/H
		About ✓/A

The **Options** menu is accessible from the Menu icon on your Palm. **Clear Screen** (command shortcut C) clears the screen on both the Palm and the PC, or the selected layer.

**Layers** allows you to select which layer to work on.

**Undo** undoes the last action.

**Redo** redoes the last action.

**Send Email** starts your PC email application, attaching your enotate document to it. See [Sending a document as an email attachment](#).

**Preferences** brings up a dialog box, allowing you to override the hardware buttons and set the smart acceleration mode. See [Palm Preferences](#) for more information.

**Help** brings up general help for the enotate on the Palm

**About** (command shortcut A) tells you the version of enotate you are using, and also if the Palm is communicating with the PC.

## Using the Pen Menu



The **Pen** menu is always available. It gives you the choice of five pen sizes. With these you can draw different size lines.

## **Using enotate on the Palm**

You must have installed enotate.prc onto your Palm to use enotate. If you have not done so already, please refer to your Palm documentation on installing files.

Make sure that your enotate PC application is running, and that your Palm is in its HotSync® cradle or plugged into a HotSync® cable, and that it is plugged into your PC.

Start enotate as you would any Palm application. In the enotate application on your PC you will now see a red dashed box. This is the same size as your Palm drawing area, and what you draw on your Palm appears there. If you do not see the red dashed box, or get a communication error message, then see [Communication Error](#).

[Using the Pen Menu](#)

[Using the Color Menu](#)

[Using the Navigate Menu](#)

[Using the Options Menu](#)

## **View Menu**

Toolbar

Status Bar

**Zoom In**

Shows more detail, but less of the document.

**Zoom Out**

Shows more of the document, but with less detail.

## **Layers**

enotate has two layers, the foreground layer and the background layer. All graphics are pasted into the background layer. All drawing takes place in the foreground layer. You can clear either layer by first selecting the layer using either the layers menu in the enotate application or layers in the option menu on the Palm. You can also clear both layers by selecting all layers.

**Undo**

Undoes the last action. enotate supports multiple undoes.



**Redo**

Redoes the last action after an Undo.

## **Layers Menu**

The layers menu allows to select which layer you are editing. The background layer, the foreground layer, or all layers.

Undoes the last action. enotate supports multiple undoes.

Redoes the last action after an Undo.

**Zoom Max**

Gives you the maximum detail of the area your working on.

**Zoom Min**

Gives you a view of the document that shows the largest area on the Palm, but with the least detail.


 
## Using the Navigate Menu

Color	Navigate	Options
	Move Left	✓L
	Move Right	✓
	Move Up	✓U
	Move Down	✓D
	Zoom In	✓I
	Zoom Out	✓O
	Zoom Max	✓>
	Zoom Min	✓<


The Navigate menu gives you options to view more or less detail, using the zoom commands, [Zoom In](#), [Zoom Out](#), [Zoom Max](#) and [Zoom Min](#). It also allows you to move your view of the drawing area that the Palm is showing. A faster way of moving the drawing area is to tap on the Draw button at the top of the Palm screen. See [Moving the drawing area](#).

## Moving the drawing area

You can move the drawing area by clicking on it with the mouse and then dragging it to a new location. You can also move it using the move mode on the Palm. Tap on the Draw button at the top of the screen, and then drag across the Palm screen to move the drawing area box on the PC. Tap the Draw button to return to drawing mode. If set in the Palm Preferences, you can use the Palm buttons to zoom in and out, and move the document a page at a time.

	Drawing mode	Anything drawn on the Palm screen appears on the PC in the drawing area
	Moving Mode	Drag across the Palm screen to move the drawing area on the PC
Date Book Button	Page Left	Pages the document and the drawing area to the left
Address Button	Zoom In	Provides a closer view of the document
Up and Down Buttons	Page Up and Page Down	Pages the document and drawing area up or down
To Do Button	Zoom out	Provides a less detailed but wider view of the document
Memo Pad Button	Page Right	Pages the document and the drawing area to the right.

## Palm Preferences

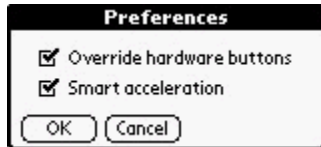

**Override hardware buttons** if checked, then the Palm buttons can be used to zoom the drawing area and move the document. See [Moving the drawing area](#) for more information.

**Smart acceleration**, when checked, sets the [Moving mode](#) so that the further you drag across the palm screen, the faster the drawing area is moved on the PC.



## **Problems list**

Communications

Palm buttons not working

**Palm buttons not working**

If the buttons on your Palm are not working as you expect, it is because enotate on the Palm uses them for zooming and scrolling. This feature can be turned off in the [Preferences](#) dialog.

Clear Button

Clears the enotate document or the selected layer.

**No web browser found**

A default web browser could not be found on your computer. Please open your browser and go to <http://www.informal.com>.

## **Recent Files**

Lists the last four files opened in enotate. Selecting a file opens it.

