

Claris CAD

GD&T Font Installation

In order to use the "ClarisCADFont" and the "GD&T" font, these fonts need to be added to the system file. The font information for both reside in the "GD&T Font" suitcase. For system 6.0.x users, use Font/DA Mover to install the fonts in the system file. For 7.0.x users, drag the font suitcase to the system folder and okay the alert to store them in the system file.