

In the **Monitor Type** panel choose your monitor selection method, (MGA Monitor or Windows 95) and then select a monitor here (for MGA Monitor) or using the **Settings / Change Display Type** sheet (For Windows 95).

When you choose this option, select your monitor through Windows 95 **Settings / Change Display Type** sheet.

The monitor name showing here is the monitor type you selected through the Windows 95 **Settings / Change Display Type** sheet.

When you choose this option, select your monitor type in the window below.

The Manufacturers list is an expanding tree structure containing all the MGA Monitor profiles. Click on any plus sign to expand a branch to view model names. Once you select a model and click on the **Properties** button, this box will display a list of resolutions supported by that model. If necessary, the list of resolutions can be expanded to see or create individual timings for particular pixel depths or zooms.

This is the Back button. It will bring you back one step, to view the monitor list .

Click on this button to test the resolutions of the monitor profile you have selected. You can also modify the timing parameters at the testing level, if you wish.

Click on this button to test a particular resolution. Testing is available only for the resolutions available in the current pixel depth, therefore, you can test a wider range of resolutions running in 256 colors.

Click on this button to delete the monitor profile that you have currently selected from the list. Note that only user-defined monitor profiles can be deleted.

Click on this button to save any changes you have made to a monitor profile.

These columns show you the refresh rate for each supported resolution of the monitor you have selected in the **MGA Monitor/Monitor Type** list, at the left.

This is the Vertical Refresh Rate for a specific mode.

This is the Horizontal Refresh Rate for a specific mode.

This is the Pixel Clock frequency for a specific mode.

[Click here to expand the display Vertically.](#)

[Click here to shrink the display Vertically.](#)

[Click here to expand the display Horizontally.](#)

[Click here to shrink the display Horizontally.](#)

[Click here to move the display position higher.](#)

[Click here to move the display position lower.](#)

[Click here to move the display position to the left.](#)

[Click here to move the display position to the right.](#)

[Click here to undo the last action.](#) Multiple undo is supported.

[Click here to reset to the original values.](#)

[Click here to display/hide timing parameter details.](#)

Use this list box to select a set of Standard Refresh rates.

Use this box to modify the Pixel Clock frequency.

Use this box to modify the Vertical refresh rate.

Use this box to modify the Vertical Front Porch value.

Use this box to modify the Vertical Back Porch value.

Use this box to modify the Vertical Sync value.

Enable this checkbox to get negative Vertical Sync Polarity.

This box shows the Vertical display resolution in pixels.

Use this box to modify the Horizontal refresh rate.

Use this box to modify the Horizontal Front Porch value.

Use this box to modify the Horizontal Back Porch value.

Use this box to modify the Horizontal Sync value.

Enable this checkbox to get negative Horizontal Sync Polarity.

This box shows the Horizontal display resolution in pixels.

Click on this button to apply the new video parameters you have entered.

