

### **To adjust physical desktop size**

- ▶ In BlasterControl Desktop, select the Physical Desktop area setting you want.

#### **Tip**

- If you select a Physical desktop area smaller (fewer pixels) than the Virtual desktop area, the display will 'extend' beyond the edges of the monitor screen.
- If the Physical desktop and Virtual desktop area settings match each other, the display will 'fit' the monitor screen.

#### **Notes**

- The Physical desktop options available to you depend on your monitor and display adapter.
  - You will not be able to change the Virtual desktop setting using BlasterControl. Instead, click the Settings tab of the Display Properties dialog box, and use the Desktop area/Screen area slider to change the desktop area.
  - To match the Physical desktop area with the Virtual desktop area, click the Factory Default button.
- The system will automatically match the Physical desktop area with the Virtual desktop area.

Displays the current screen area setting which has been selected on the Settings tabbed page of Display Properties.

Lists the Physical desktop area settings that your display adapter and monitor support and allows you to make a selection.

Changes the Physical desktop area setting to match the Virtual desktop area setting.

