

Overview

Here is a short guide:

Use the left button to scroll trough the menus.

To select a menu, press the middle button.

Navigate now trough the sub-menus (with the left button) and select one with the middle button.

Use the right button to cancel!

How to play with your Chick:

There's a game inside: "Dice"

Select it from the menu and you'll see a small dice on the left. Click the middle button and you'll see another dice on the right.(The dice on the left is yours and the one on the right is the chick ones!)

To play one more time, click the middle button again!

To cancel, press the right button!

If you have a problem, write me: patrick_moor@logon.ch