

The X-10 Command Window

This window is used to issue any specific X-10 ON/OFF 'raw' command. Any housecode / unit address can be directly commanded ON or OFF, or Dimmed (up or down).

THIS IS NOT intended for normal control of your system.
This feature is included for system development and diagnosis.