

Welcome to RoboHELP. Click Topic (Ctrl+T) to add your first Help topic.

If the screen shows up not in the right centering, you can use up, down, left or right button to move the whole screen to the corresponding direction.

If you know a specific refresh rate to work better on your application, you can change the refresh rate by up or down button to set the refresh rate and then select OK or Apply button to activate.

Note: The higher refresh rate will increase the CPU time to update the screen.

This shows up the current refresh rate.

Help is available for each item in this group. Click ? at the top of the dialog box, and then click the specific item you want information about.

