

## Display Driver UNInstallation

The UNinstall program enables the user to safely delete specific display drivers or an entire display driver set.

*To remove an entire Display Driver Set, complete the following steps:*

1. Using the arrow keys or mouse, select the Display Driver Set that is to be removed (the set to be deleted should be high-lighted).
2. Once the desired Driver Set is selected, simply select the **DELETE** or press **ENTER**.

**NOTE:** The UNinstall program will not permit the deletion of a Display Driver set that is currently used.

*To remove an individual driver from a Display Driver Set, complete the following steps:*

1. Using the arrow keys or mouse, select the Display Driver Set that is to be removed (the set to be deleted should be high-lighted).
2. Once the desired Driver Set is selected, click on the **Enter** button. This will pull up a list of available display drivers.
3. Select the display driver to be deleted by using the mouse or the up/down arrow keys to scroll through the list.
4. Click on the **Delete** button or press **ALT+D** to delete the selected display driver.

