

Display Driver UNinstallation

The UNinstall program enables the user to safely delete specific display drivers or an entire display driver set.

To remove an entire Display Driver Set, complete the following steps:

1. Using the arrow keys or mouse, select the Display Driver Set that is to be removed (the set to be deleted should be high-lighted).
2. Once the desired Driver Set is selected, simply select the **DELETE** or press **ENTER**.

NOTE: The UNinstall program will not permit the deletion of a Display Driver set that is currently used.

To remove an individual driver from a Display Driver Set, complete the following steps:

1. Using the arrow keys or mouse, select the Display Driver Set that is to be removed (the set to be deleted should be high-lighted).
2. Once the desired Driver Set is selected, click on the **Enter** button. This will pull up a list of available display drivers.
3. Select the display driver to be deleted by using the mouse or the up/down arrow keys to scroll through the list.
4. Click on the **Delete** button or press **ALT+D** to delete the selected display driver.

