

3Com EtherLink III EISA Adapter

874264_PixelRule.tiff ↗

Network Devices

94627_network.tiff ↗

This device driver is designed to run on an Intel-based computer running OPENSTEP for Mach Release 4.1.

Supported Hardware

- | | |
|----------------------------------|--------------|
| 3Com EtherLink III 3C579 EISA | (AUI, BNC) |
| 3Com EtherLink III 3C579-TP EISA | (AUI, RJ-45) |

Installing the Adaptor

- Install the adapter in the system and configure it using the EISA Configuration Utility (ECU) provided with your system. Refer to the 3Com EtherLink III User's Guide for complete information.

Configuration

- Log in as root and run Configure to add the adapter to the system.
- Click on the Network Devices icon at the top of Configure's "Summary of Devices" window. In the Add Network Devices panel that opens, select the radio button labeled "Show Drivers for Detected Devices" if it is not already highlighted.
- Select "3Com EtherLink III EISA Adapter" from the list, and click Add.
- Select the Connector.
- Click Done, then click Save, then quit Configure.

255805_PixelRule.tiff ↗

See also

- "Add a Device" in Configure's on-line help.
- See NeXTanswer 1824 for general information on installing and configuring device drivers.