



Error ID

1	Bus Error: a memory reference problem occurred on a Mac XL or on	a modified Mac or Mac+.
2	Address error: The program referred to an odd memory address	
3	Illegal instruction: the MC68000 microprocessor encountered a	machine language instruction it did
	no recognize.	
4	Zero divide: a machine language instruction Signed Divide (DIVS) or Un-Signed (DIVU) had a divisor of zero.	
5	Check exception: the machine language Check Register Against	Bounds (CHK) failed; perhaps a
	pascal "value out of range" error	occurred.
6	Trap V exception: the machine language instruction Trap on	Overflow (TRAPV) failed.
7	Privilege violation: the mac always runs in privilege	(supervisor) mode; perhaps an
	erroneous Return from execution	(RTE) machine language instruction
	was encountered.	
8	Trace exception: the trace bit on the microprocessor's status	register is set.
9	Line 1010 exception: the 1010 trap dispatcher failed, making it	impossible to use ROM.
10	Line 1111 exception: an un-implemented machine language	instruction was encountered;
	perhaps a leftover breakpoint from	program debugging.
11	Miscellaneous exception: a non-specific error condition caught by	the microprocessor.
12	Unimplemented core routine: the microprocessor encountered a	non-existent trap number, perhaps
	a fictitious ROM routine.	
13	Spurious interrupt: the interrupt vector table entry for a	particular level of interrupt is NIL,
	this usually occurs with	level 4,5,6, or 7 interrupts.
14	I/O system error: the macs file manager found a bad type field in	an entry on an I/O request queue,
	the dCtlQHead field was NIL	during a fetch or stash call in a
	custom driver routine, or a	needed device control entry has
	been purged.	
15	Segment loader error: the GetResource procedure was unable to	read a segment into memory.
16	floating point error: the halt bit in a floating-point enviroment	word was set.
17-24	Can't read Pack Resource into memory.	
25	Memory full or fragmented: the memory manager was unable to fill the	programs request for more memory.
26	Segment loader error: the GetResource procedure encountered a	non-executable resource or was
	unable to read 'CODE' segment 0 into	memory for some other reason.
27	File map destroyed: the volume contains a block with a block number	higher then the last block or lower
	than the first block.	
28	Stack overflow error: a memory problem occurred because the stack	expanded into the heap.