

Used to specify form and manual feed settings.

Specifies the form assigned to the main paper roller.

Specifies the form assigned to the main paper feeder.

Specifies the form to be manually fed.

Specifies the paper orientation used when the printer is set to use manual feed.

Used to control how documents are printed on paper.

Specifies whether or not to rotate the form so that the shortest side is printed, to save paper.

Specifies whether or not to print if the selected paper size is smaller than the installed paper size. If this is not selected, documents that use smaller paper sizes will be held in the queue until paper of the appropriate size is installed, or until this option is selected.

Specifies the installed pen set.

Used to specify pen colors in each pen set.

Use to specify colors for each pen in the selected set.

Specifies the color of the specified pen.

[Click this to view or adjust halftone-color settings.](#)

Specifies whether TrueType fonts should be drawn as outlines or filled in. Use filled TrueType fonts only for final quality because filling the fonts slows the device and wears out the pens faster.

Specifies whether or not to use a fast-picture print mode.

This option prints a picture quickly by starting to plot the picture as soon as it is sent to the plotter, allowing a very large picture to print regardless of the plotter memory.

When this option is selected, the plotter ignores all text in a poster, printing only a single image.

This option is automatically turned off when a typical size (for example, letter or legal) document is printed.

**To view the information in this Help file**

- 1 Click here  to open the Printers folder.
- 2 Click the printer you are using.
- 3 On **File** menu, click **Properties**.
- 4 Click the **Device Settings** tab.
- 5 For Help on an item, click  at the top of the dialog box, and then click the item.

