

Support Group Application Note

Number: 055

Issue: 1

Author:



Saving Timpaint onto a blank disc

Applicable

Hardware :

BBC Master Compact

Related

Application

Notes:

Copyright © Acorn Computers Limited 1992

Every effort has been made to ensure that the information in this leaflet is true and correct at the time of printing. However, the products described in this leaflet are subject to continuous development and improvements and Acorn Computers Limited reserves the right to change its specifications at any time. Acorn Computers Limited cannot accept liability for any loss or damage arising from the use of any information or particulars in this leaflet. ACORN, ECONET and ARCHIMEDES are trademarks of Acorn Computers Limited.

Support Group
Acorn Computers Limited
Acorn House
Vision Park
Histon
Cambridge CB4 4AE

Load **Timpaint** from Welcome disc.

Remove the Welcome disc and insert the blank disc.

Filename:

```
:0.Fred <return>
(where Fred is the filename)
```

To load the file you will need to type in :0.Fred

NB When the blank disc is inserted pressing R will not return you to a blank Timpaint screen. To do that you must replace the Welcome disc.