

Turtle Beach CD Player



This is the **Turtle Beach CD player**. Click on the function with which you need assistance.

Eject

StopPlay

Forward

Rewind

Always on Top

Eject



Clicking within this area will **eject** the tray from your CD player and cause this bitmap,  to appear until another CD has been placed in the player. You may also **eject** the tray by pressing **Alt+E**.

Stop



Clicking within this area will **stop** the CD player from playing the audio CD and return the position to the beginning of the current track. You may also use the short-cut key **Alt+S**.

The **space bar** may also be used to toggle the CD player between **play** and **stop**.

Play



Clicking within this area will begin **play** at the beginning of the current track to the end of the CD. You may also use the short-cut key combination of **Alt+P**.

The **space bar** may also be used to toggle the CD player between **play** and **stop**.

Forward



Clicking within this area will advance the current track by increments of one.

The **Right Arrow Key** may also be used to advance the current track.

Rewind



Clicking within this area will decrease the current track by increments of one.

The **Left Arrow Key** may also be used to decrease the current track.

Time Display

This area displays the current position in minutes and seconds.

Track

This area displays the current selected track.

Always on Top

Selecting this option will keep TBCD "on top" of your windows desktop at all times (even when TBCD is not active). You may also select or deselect this option with the key combination **Alt+A**.

