

```
#####  
#      File:    Panels  
#  
#      Contains:    The panels for Apple Video Player Guide  
#  
#      Coded by:    Shemin Gau, Kay Burnett, Ted Jones  
#      Content by:   Stephanie Koester  
#  
#      Copyright:    ©1993-1994 by Apple Computer, Inc., all rights reserved  
#  
#####
```

```
# COMMENT FOR BUILD ALONE  
# <dimnable button data> "Huh?", "Definitions Tips for finding items"
```

```
#  
#      Shared panels portion of TV  
#
```

```
#      #####  
#      The following panels contain the shared panels throughout this file  
#      #####
```

```
#####
```

```
#      The following panels are used in Definitions  
#      #####
```

```
#      #####  
#      The following panel is for "SAP"  
#      #####
```

```
<DEFINE PANEL> "sap: def.tv"  
                <FORMAT> "full.tv"  
                Some stations offer a second sound channel called Second Audio Program  
                (SAP), which is sometimes used to broadcast the program in a different  
                language. If you are viewing a program that has two sound tracks, you can  
                select SAP in the Sound portion of the Controls window to listen to the  
                second sound track.
```

```
<END PANEL>
```

```
#      #####  
#      The following panel is for "closed captions and video text"  
#      #####
```

<DEFINE PANEL> "closed captions and video text: def.tv"

<FORMAT> "full.tv"

Some broadcast and cable TV programs feature closed caption text tracks for people with impaired hearing. And in some areas, video text tracks that display programming schedules, news, or financial data are available. When your video source is set to TV, you may be able to take advantage of these special tracks.

<END PANEL>

```
# #####  
# The following panel is for "composite video"  
# #####
```

<DEFINE PANEL> "composite video: def.tv"

<FORMAT> "full.tv"

Composite video is the format used by televisions, most videocassette recorders (VCRs), and most laserdisc players. You can display and use composite video images by using a composite video cable (with an RCA connector) that plugs into your computer's composite video input port.

<END PANEL>

```
# #####  
# The following panel is for "s-video"  
# #####
```

<DEFINE PANEL> "s-video: def.tv"

<FORMAT> "full.tv"

S-video is a high-quality video format used by many cameras and videocassette recorders (VCRs). You can display and use S-video images by using an S-video cable (with a 4- or 7-pin connector) that plugs into your computer's S-video input port.

<END PANEL>

```
# #####  
# The following panel is for "composite or S-video"  
# #####
```

<DEFINE PANEL> "composite and S-video: huh.def"

<FORMAT> "full.tv"

Composite video and S-video are video formats.

Composite video is the format used by televisions, most videocassette recorders (VCRs), and laserdisc players. You can display and use composite video images by using a composite video cable (with an RCA connector) that plugs into your computer's composite video input port.

S-video is a high-quality video format used by many cameras and some VCRs. You can display and use S-video images by using an S-video cable (with a 4- or 7-pin connector) that plugs into your computer's S-video input port.

<END PANEL>

```
# #####  
# The following panel is for "NTSC, PAL, and SECAM"  
# #####
```

<DEFINE PANEL> "NTSC, PAL, and SECAM: def.tv"

<FORMAT> "full.tv"

NTSC, PAL, and SECAM are formats for television video signals.

- NTSC is the standard video signal used in North America, Central America, Japan, and parts of South America.
- PAL is the standard video signal used in Western Europe, Australia, most of Asia, and parts of South America and Africa.
- SECAM is the standard video signal used in France, Eastern Europe, and parts of Asia and Africa.

<END PANEL>

```
# The following panels are used in How do I's  
# #####  
  
# #####  
# The following panel is for "customize the TV channel list?"  
# #####
```

<DEFINE PANEL> "TV: customize list intro"

<FORMAT> "full.tv"

Your computer is equipped to receive any TV channels that are picked up by your antenna or cable decoder box, including channels with poor reception or no signal.

You can customize your TV channel list by programming your computer to skip certain channels when you're browsing through them. You can also manually add and remove channels from the list.

You make these adjustments in the Channel Setup dialog box.

<END PANEL>

<DEFINE PANEL> "AppleTV: choose signal connection"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Open the Connection pop-up menu and select the source of your TV signal.

For information on HRC Cable, click Huh? below.

<Dimmable Button Data> "Huh?", "HRC Cable"

<END PANEL>

<DEFINE PANEL> "HRC Cable"

<FORMAT> "full.tv"

A small number of cable services use HRC frequencies instead of standard cable frequencies. If you can't receive channels above channel 13, try selecting HRC Cable.

<END PANEL>

<DEFINE PANEL> "AppleTV: click Auto Add"

<panel prompt> "override: BS1.tv"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

To automatically remove channels that don't have valid signals, click Auto Add in the Channel Setup dialog box.

Your computer will scan through all the channels picked up by the currently selected signal source, skipping those that do not have a detectable signal. This scan may take up to 30 seconds.

The channels that Auto Add skips are removed from the channel list. You won't see them when you change channels.

<coach mark> "Auto Add item"

<END PANEL>

<DEFINE PANEL> "AppleTV: choose add or remove"

<FORMAT> "full.tv"

You can also add or remove channels manually.

Auto Add filters out channels that don't send valid signals, but it doesn't remove channels that send valid but scrambled signals (for example, premium cable channels to which you don't subscribe). Or, Auto Add may remove a channel that you want to restore.

Which of the following do you want to do? Click one or more:

<checkbox> "Add a channel.", false,,,APPLEGUIDE

<checkbox> "Remove a channel.", false,,,APPLEGUIDE

<END PANEL>

Keystroker said that the text is appearing after the coach. That's normal icky behavior that we can do nothing about, right?

Right. -- TJ

<DEFINE PANEL> "AVP: Click Add"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

To add a channel to the TV channel list, click Add in the Channel Setup dialog box. (If the Add button is dimmed, all possible channels for the currently selected signal source are already available.)

<coach mark> "Click add channel list item"

<END PANEL>

<DEFINE PANEL> "AVP: add channels"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

In the Add Channels dialog box that appears, select one or more channels that you want to add to the channel list (to select more than one channel, hold down the Shift key and click). Then click Add.

<END PANEL>

<DEFINE PANEL> "AppleTV: remove channel"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

To remove a channel from the TV channel list, select the channel number in the Channel Setup channel list (to select more than one channel, hold down the Shift key and click). Then click Remove.

<END PANEL>

#####

The following panels are used in How do I “assign names to the TV channels?”

#####

<DEFINE PANEL> "AppleTV: add descriptions intro"

<FORMAT> "full.tv"

You can assign names to the channels in your TV channel list in the Channel Setup dialog box.

<END PANEL>

<DEFINE PANEL> "AppleTV: choose Channel Setup"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Choose Channel Setup from the Setup menu.

If you have turned on password protection for any channels, you may need to enter your password now, and then click OK.

<coach mark> "Setup-Channel Setup... Menu"

<END PANEL>

```

<DEFINE PANEL> "AppleTV: select channel to edit"
  <FORMAT> "tag.tv"
  Do This

  <FORMAT> "body.tv"
  Select a channel number from the channel list, then click Edit Name. (Or,
  double-click the channel number.)
  #<coach mark> "channel list item.tv"
<END PANEL>

```

```

<DEFINE PANEL> "AppleTV: type channel name"
  <FORMAT> "tag.tv"
  Do This

  <FORMAT> "body.tv"
  Type your channel description (up to 15 characters) in the Name box.

  Names you might find useful are the station network affiliation (ABC, CBS,
  etc.), station call letters (KRON, KQED, etc.), and programming type (News,
  Movies, Sports, etc.).
  <coach mark> "description item.tv"
<END PANEL>

```

```

<DEFINE PANEL> "AppleTV: click OK"
  <FORMAT> "tag.tv"
  Do This

  <FORMAT> "body.tv"
  Click OK in the Edit Name dialog box.
  <coach mark> "Edit name OK item"
<END PANEL>

```

```

<DEFINE PANEL> "AVP: click ok to close Channel Setup"
  <FORMAT> "tag.tv"
  Do this

  <FORMAT> "body.tv"
  Click OK to close the Channel Setup dialog box.
  <coach mark> "Channel OK item"
<END PANEL>

```

```

# #####
# The following panels are for "How do I adjust the picture settings?"

```

#####

<DEFINE PANEL> "AppleTV: missing video or TV card"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

If you want to perform this task on images coming from an external video source such as a VCR or a camcorder, you need to install a video input card in your computer. If you want to use a television signal to perform this task, you need to install both a video input card and a TV tuner card.

To learn about the video and TV capabilities of your computer, refer to the manual that came with it. Or, contact an Apple-authorized dealer for more information.

<END PANEL>

#####

Following is beginning of HDI: adjust the picture settings?

#####

<DEFINE PANEL> "AppleTV: adjust picture intro"

<FORMAT> "full.tv"

You can change the brightness, sharpness, and tint settings for your video or TV image in the Controls window.

<END PANEL>

<DEFINE PANEL> "AppleTV: choose Show TV controls"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Open the Windows menu and choose Show Controls Window.

<coach mark> "Windows-Show Controls Window Menu"

<END PANEL>

<DEFINE PANEL> "AppleTV: click Video Display source"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Under Video Source, select the video source that you want to see or hear on your computer.

If you have a TV tuner card installed in your computer and you want to watch TV, click TV.

If you want to watch video coming from external equipment that you've connected to your computer, click Video or S-Video. (Click Video if your equipment uses the composite video format. Click S-Video if your equipment uses S-video format.)

<Dimmable Button Data> "Huh?", "composite or S-video"

<coach mark> "video source item.tv"

<END PANEL>

<DEFINE PANEL> "AppleTV: drag picture sliders"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Drag the Brightness, Sharpness, and Tint sliders to either side to change the picture setting.

Drag the sliders to the right to increase brightness, sharpness, or tint. Drag the sliders to the left to decrease the setting.

<coach mark> "picture/sound sliders.tv"

<END PANEL>

The following panels are used in "How do I adjust volume and other sound settings?.S&T"
#####

<DEFINE PANEL> "AppleTV: adjust sound intro"

<FORMAT> "full.tv"

You can adjust the video or TV volume with

- volume controls on the front of your computer
- volume controls in the video window
- Up and Down Arrow keys on your keyboard
- if you have one, your remote control

You can also change the sound balance, bass, treble, and sound mode (Mono, SAP, or Stereo), in the Controls window.

<END PANEL>

<DEFINE PANEL> "AppleTV: adjust sound intro2"

<FORMAT> "full.tv"

Which of the following do you want more information on? Click one.

<radio button> "Adjusting the volume.", true,,,APPLEGUIDE

<radio button> "Adjusting the balance, bass, and treble.", false,,,APPLEGUIDE

<radio button> "Adjusting the sound mode.", false,,,APPLEGUIDE

<END PANEL>

<DEFINE PANEL> "AppleTV: adjust volume"

<PANEL PROMPT> "override: BS2.tv"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

To adjust the video or TV volume:

- Press the volume buttons on the front of the computer.
- In the video window, drag the speaker volume slider up or down. (The slider is available only when the video window size is set to Normal.)
- On your keyboard, press the Up or Down Arrow key.
- If your equipment came with a remote control, point the remote at your computer and press either the + or the - Volume button. To mute the sound, press Muting.

<END PANEL>

<DEFINE PANEL> "AppleTV: click sound icon"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Click the speaker icon on the left side of the Controls window.

<coach mark> "speaker/audio item.tv"

<END PANEL>

<DEFINE PANEL> "AppleTV: select sound mode"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Under "Sound Mode," click mono, SAP, or stereo.

For a definition of SAP, click Huh? below.

<Dimmable Button Data> "Huh?", "Definitions Second Audio Program (SAP)"

<coach mark> "monoSAP item"

<END PANEL>

<DEFINE PANEL> "AppleTV: drag volume slider"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Drag the vertical slider on the right side of the video window up to increase the volume, or down to decrease the volume. (The volume slider is available only when the video window size is set to Normal Size or Other Size in the Windows menu.)

<END PANEL>

<DEFINE PANEL> "AppleTV: drag sound sliders"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

To change the balance, bass, and treble, drag the sliders to either side.

Drag the Balance slider to the right to increase the sound coming from the right speaker and decrease the sound from the left. Drag the slider to the left for the opposite effect. (Balance affects only headphones and external speakers.)

Drag the Bass or Treble slider to the right to increase the bass (low-pitched tones) or treble (high-pitched tones), and to the left to decrease the bass or treble.

<coach mark> "picture/sound sliders.tv"

<END PANEL>

```
# #####  
# The following panels are used in "How do I change the TV channel?"  
# #####
```

<DEFINE PANEL> "AppleTV: change channels.intro"

<FORMAT> "full.tv"

There are four ways to change the TV channel:

- Point the remote control at your computer and press either the + or - Channel button.
- On your keyboard, press the number of the channel you want.
- Press the Left or Right Arrow key on your keyboard.
- In the video window, click the Up or Down Arrow channel controls.

You must be viewing TV to see your actions take effect. For instructions, click Huh? below.

<Dimmable Button Data>

"Huh?", "How do I view video or TV on my computer?"

<END PANEL>

```
# #####  
# The following panel is for "restore the original settings?"  
# #####
```

<DEFINE PANEL> "AppleTV: restore settings intro"

<FORMAT> "full.tv"

You can delete your TV password (you may want to if you've forgotten it) and all other TV and video settings (channel names, sound and picture settings, etc.) by dragging the Apple Video Player Prefs file out of the Preferences folder (in the System Folder) into the Trash, and then emptying the Trash.

Before you drag the Apple Video Player Prefs file to the Trash, you must first quit the Apple Video Player program. Once you quit the program, this Guide window will no longer be visible. For detailed instructions while you perform this task, see the Read Me file in the Apple Video Player folder.

<END PANEL>

```
# #####  
# The following panel is for "set a password for TV viewing?"  
# #####
```

<DEFINE PANEL> "AppleTV: set password intro"

<FORMAT> "full.tv"

You can set a password that must be entered before you or anyone else can watch a locked TV channel or open the Channel Setup dialog box. You can also turn off password protection for a channel if you no longer want it. You set these options in the Channel Setup and Set Channel Password dialog boxes.

Which do you want to do? Click one:

<radio button> "Create a password.", true,,,APPLEGUIDE

<radio button> "Change a password.", false,,,APPLEGUIDE

<radio button> "Turn off password protection.", false,,,APPLEGUIDE

<Dimmable Button Data> "Huh?", "locking channels and setting passwords"

<END PANEL>

<DEFINE PANEL> "AVP: click ok to close Channel Password"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Click OK to close the Set Channel Password dialog box.

<coach mark> "Channel Password OK item"

<END PANEL>

<DEFINE PANEL> "AppleTV: choose Set Channel Password"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Choose Set Channel Password from the Setup menu.

<coach mark> "Set Channel Password Menu.tv"

<END PANEL>

<DEFINE PANEL> "AppleTV: enter password"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Type your password in the Password box.

You can also type a clue in the Clue box to help you remember your password, though it isn't required.

<END PANEL>

<DEFINE PANEL> "AppleTV: verify password"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

In the Verify Channel Password dialog box, type your current password and then click OK.

If you can't remember your password, you'll need to reset it by restoring all your original video and TV settings. For instructions on resetting the password and other settings, click Huh? below.

<Dimmable Button Data> "Huh?", "How do I restore the original settings?"

<coach mark> "verifyPassword item"

<END PANEL>

<DEFINE PANEL> "AppleTV: change password"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

In the Set Channel Password dialog box, type the new password and (if you like) a clue.

<coach mark> "newPassword item"

<END PANEL>

<DEFINE PANEL> "AVP: password active"

<PANEL PROMPT> "override: BS7.tv"

<FORMAT> "full.tv"

Your password is now active. You will need to enter your password before you or anyone else can watch a locked TV channel or open the Channel Setup dialog box.

<END PANEL>

<DEFINE PANEL> "AppleTV: lock password channel"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

To set password protection for a channel, select the channel to which you want to limit access, and then click Lock.

When you type a locked channel number on the keyboard, you'll be asked to enter your password before the channel is available. The same password applies to all locked channels.

<coach mark> "channel list item.tv"

<END PANEL>

<DEFINE PANEL> "AppleTV: select channel to unlock"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

To turn off password protection for a channel, select the channel that currently requires a password, and then click Unlock. (Only locked channels can have password protection.)

<END PANEL>

#####

Panels for new question: HDI: lock and unlock TV channels?

#####

<DEFINE PANEL> "AppleTV: lock channel intro"

<FORMAT> "full.tv"

You can lock TV channels so that they don't appear while you're changing channels using the remote control. However, you can still watch a locked channel by typing its number on the keyboard. (If password protection is in effect, you need to enter the password before the locked channel becomes available.)

You lock and unlock channels in the Channel Setup dialog box.

<Dimmable Button Data>

"Huh?", "locking channels and setting passwords"

<END PANEL>

<DEFINE PANEL> "locking channels and setting passwords"

<FORMAT> "full.tv"

Locking channels and setting passwords are two ways you can control TV viewing.

Locked channels are skipped when you scan with the remote control. However, you can still view locked channels by typing the channel number on the keyboard.

Channels with password protection are also locked, but in addition, they require you to enter your password before you can view the channel.

You can also use password protection to restrict access to the Channel Setup dialog box.

<END PANEL>

<DEFINE PANEL> "AppleTV: lock channel"

<panel prompt> "override: BS3.tv"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

In the channel list, click the channel that you want to lock or unlock. (To select more than one channel, hold down the Shift key and click them.) Then do one of the following:

- To lock the channel you've selected, click Lock
- To unlock the channel you've selected, click Unlock

When you're finished, click OK.

<END PANEL>

<DEFINE PANEL> "AppleTV: watching locked channels"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

To watch a locked channel, type its number on the keyboard. When the dialog box asks you if you'd like to enable the channel, click Yes.

If no password is in effect, you tune into the channel. If a password has been set, you must enter it before the channel becomes available.

<Dimmable Button Data> "Huh?", "locking channels and setting passwords"

<END PANEL>

```
# #####  
# The following panel is for "use a hot key to view video or TV?"  
# #####
```

<DEFINE PANEL> "AppleTV: switch intro"

<FORMAT> "full.tv"

You can quickly open or close the Apple Video Player video window by using a keyboard shortcut called a "hot key." The default hot key is Option-Tab.

You can create a new hot key in the hot key dialog box. You can also open and close the video window using the TV/Mac button on your remote control.

Which do you want to learn more about? Click one:

```
<radio button> "Creating a keyboard shortcut.",TRUE,,,APPLEGUIDE
<radio button> "Using the remote control.", FALSE,,,APPLEGUIDE
<END PANEL>
```

<DEFINE PANEL> "AppleTV: switch remote"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

To open the Apple Video Player program or to bring its video window to the front, press the TV/Mac button on your remote control.

To close the Apple Video Player program (when its video window is the front window), press the TV/Mac button on your remote control.

<END PANEL>

<DEFINE PANEL> "AppleTV: choose Hot Key"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Choose Hot Key from the Setup menu.

<coach mark> "Setup-Hot Keys Menu"

<END PANEL>

<DEFINE PANEL> "AppleTV: enter Hot Key"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Simultaneously press the keys you want to use to open and close the Apple Video Player program. It's a good idea to make the first key †, Option, Shift, or Control; the other can be any letter or number.

Don't use a key combination that is already used by your application programs. For instance, don't use †-P, which is used for printing in most programs.

Click OK to close the Hot Key dialog box.

<END PANEL>

<DEFINE PANEL> "AppleTV: use Hot Key"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

To open the Apple Video Player program or bring its video window to the front, press your hot key.

To close the Apple Video Player program (when its video window is the front window), press your hot key.

<END PANEL>

```
# #####  
# The following panels are for "view closed captions?"  
# #####
```

<DEFINE PANEL> "AppleTV: captions intro"

<FORMAT> "full.tv"

Some television programs include closed captions as a service to the hearing impaired. You can choose to display these captions in the Closed Captioning portion of the Controls window. You can also choose to display video text if it's available.

Note: The Video Source in the Controls window must be set to TV to choose these options.

<Dimmable Button Data> "Huh?", "closed captions and video text"

<END PANEL>

<DEFINE PANEL> "AppleTV: click Video Screen icon"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Click the video screen icon on the left side of the Controls window.

<coach mark> "TV icon.tv"

<END PANEL>

<DEFINE PANEL> "AppleTV: click TV Video Display"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Click TV under Video Source.

<coach mark> "TV item.tv"

<END PANEL>

<DEFINE PANEL> "AppleTV: click Captions icon"
 <FORMAT> "tag.tv"
 Do This

 <FORMAT> "body.tv"
 Click the CC icon on the left side of the Controls window.
 <coach mark> "captions item.tv"
<END PANEL>

<DEFINE PANEL> "AppleTV: set caption options"
 <PANEL PROMPT> "override: BS6.tv"
 <FORMAT> "tag.tv"
 Do This

 <FORMAT> "body.tv"
 To turn on closed captions, click CC1 or CC2.

- Choose CC1 for programs that offer just one set of captions (true for most programs).
- Choose CC2 for programs that supply two sets of closed captions. (The second set of captions is often in a second language.)

 To turn off closed captions, click Off.
 <coach mark> "captioning item"
<END PANEL>

<DEFINE PANEL> "AVP set Text options"
 <FORMAT> "tag.tv"
 Do This

 <FORMAT> "body.tv"
 To turn on video text, click Text 1 or Text 2.

- Choose Text 1 for programs that offer just one set of video text.
- Choose Text 2 for programs that supply two sets of video text.

 <coach mark> "text controls item"
<END PANEL>

The following panels are for "view video or TV on my computer?"
#####

```
#<PANEL> "AppleTV: view video or TV intro"
#<PANEL> "AppleTV: choose Show TV controls"
#<PANEL> "AppleTV: click Video Screen icon"
#<PANEL> "AppleTV: click Video Display source"
```

```
<DEFINE PANEL> "AppleTV: view video or TV intro"
```

```
<FORMAT> "full.tv"
```

To view video or TV on your computer monitor, you need to do the following:

- Set the appropriate Video Source in the Controls window.
- Have the appropriate card installed or equipment connected to your computer. To watch TV, you need to have a TV tuner card and a video input card installed. To watch video, you need to have a video input card installed, and a video source connected to your computer's video input port. (For more information on the cards in your computer or on connecting equipment to your computer, see the manuals that came with your computer.)

```
<END PANEL>
```

```
# #####
# The following panel is for "capture video images?"
# #####
```

```
<DEFINE PANEL> "AppleTV: capture intro"
```

```
<FORMAT> "full.tv"
```

You can save a single video frame in a PICT file, copy a frame to the clipboard, or save a series of frames as a QuickTime movie, by using the Copy Video Display command or the capture controls in the Controls window.

Which do you want to do? Click one:

```
<radio button> "Save a frame of video in a PICT file.", true,,,APPLEGUIDE
<radio button> "Copy a frame of video to the clipboard.", false,,,APPLEGUIDE
<radio button> "Save a video sequence.", false,,,APPLEGUIDE
```

```
<END PANEL>
```

```
<DEFINE PANEL> "AV: copyright warning.tv"
```

<panel prompt> "override: r&c.tv"

<FORMAT> "full.tv"

IMPORTANT: Prerecorded videotapes, broadcast video programs, and other prerecorded images, movies, and sound, whether in video, audio, or digital form, may be proprietary and protected by copyright. If you want to capture prerecorded materials, you may need to obtain the consent of the copyright owner or seek the advice of a lawyer.

<END PANEL>

<DEFINE PANEL> "AppleTV: click camcorder icon"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Click the video camera icon on the left side of the Controls window.

<coach mark> "camcorder item.tv"

<END PANEL>

<DEFINE PANEL> "AppleTV: choose Copy Display"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

To copy the current screen image, choose Copy Video Display from the Edit menu or press ⌘-C.

IMPORTANT: When you use Copy Video Display, the current screen image is copied to the clipboard. The image is not saved on disk. (To save an image that's on the clipboard, you must paste it into a document or the scrapbook.)

<coach mark> "Edit-Copy Video Display menu"

<END PANEL>

<DEFINE PANEL> "AppleTV: capture a video frame"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

To capture a single frame of video as a PICT file:

1. Under Capture Picture, click Freeze.
2. If you want to save the video frame that you see frozen in the video window, click Save (under Capture Picture). In the Save dialog box that appears, enter a name for the file, specify where to save it, and click Save.
3. Click Freeze again to restart the video.

<END PANEL>

<DEFINE PANEL> "AppleTV: before saving movie"

<panel prompt> "override: BS4.tv"

<FORMAT> "full.tv"

Before saving your video as a QuickTime movie, you may want to change the movie compression ratio in order to save disk space or increase the movie quality.

To learn about your video compression choices, click Huh? below.

<Dimmable Button Data> "Huh?", "How do I use video compression?"

<END PANEL>

<DEFINE PANEL> "AppleTV: capture QuickTime movie"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

To save a series of video frames as a QuickTime movie:

1. Under Capture Movie, click Record (the Record button turns into a Stop button). Recording continues until you click Stop or see a message that there is not enough memory or disk space to continue recording.
2. Click Stop when you want to stop recording.
3. In the Save dialog box that appears, click the play icon under the video window if you want to see the movie before saving it.
4. To save the QuickTime movie, name it, specify where to save it, and click Save.

For a tip on saving storage space, click Huh? below.

<Dimmable Button Data> "Huh?", "saving disk space with movies"

<END PANEL>

<DEFINE PANEL> "saving disk space with movies"

<FORMAT> "body.tv"

The amount of disk space that a movie uses is directly related to the size of the video window—the larger the window, the more disk space you use.

By choosing Smallest Size from the Windows menu before you record, you may be able to save more than 50% in storage space. (An uncompressed movie uses about 34 megabytes per minute at the smallest size and 75 megabytes per minute at normal size.)

<END PANEL>

#####

The following panels are for "How do I use video compression?"

#####

<DEFINE PANEL> "AppleTV: compression intro"

<FORMAT> "full.tv"

You can use video compression to store movies in a much smaller space than they would normally require. You set movie compression in the Preferences dialog box.

<END PANEL>

<DEFINE PANEL> "AppleTV: choose Preferences"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Choose Preferences from the Setup menu.

<coach mark> "Setup-Preferences menu"

<END PANEL>

<DEFINE PANEL> "AppleTV: choose movie compression"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Under Movie Compression, click None, Normal, or Most. Then click OK.

- Click None for no compression to take place.
- Click Normal to compress the video 12% to 50% of the disk space that None uses: the less movement that occurs from frame to frame in the movie, the greater the savings with choosing Normal.
- Click Most to use slightly less disk space than Normal.

<Dimmable Button Data> "Huh?", "Definitions video compression"

<coach mark> "Movie Compression item"

<END PANEL>

<DEFINE PANEL> "AVP: video compression"

<FORMAT> "full.tv"

Video compression allows you to store movies in a much smaller space than they would normally require. Compression affects the picture quality: the more compression, the more grainy the picture.

<END PANEL>

```
# #####  
# The following panel is for "How do I move or resize the video window?"  
# #####
```

```
# Uses these panels  
#  
# "AppleTV: missing video card"  
# "AppleTV: move or resize intro"  
# "AppleTV: move or resize"  
# "TV: not for you"
```

<DEFINE PANEL> "AppleTV: move or resize intro"

<FORMAT> "full.tv"

You can move the video window to any location on your screen by dragging the title bar.

You use the size box to resize the window. Or, you can choose different video window sizes from the Windows menu.

<END PANEL>

<DEFINE PANEL> "AppleTV: move or resize"

<panel prompt> "override: BS5.tv"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

To move the video window, point the mouse cursor at the window's title bar, hold down the mouse button, and drag the window to a new location.

To change the size of the window, drag the size box in the lower-right corner in any direction until the window is the size you want.

You can also switch from Smallest, Normal or Other Size to Largest Size by clicking the zoom box in the upper-right corner.

<END PANEL>

<DEFINE PANEL> "AppleTV: choose Size from menu"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Choose Smallest Size, Normal Size, Largest Size, or Other Size from the Windows menu.

On monitors that are 13 inches (640 x 480 pixels) or smaller, Largest Size takes up the whole screen and hides both the menu bar and the Controls window. Move the mouse to make the menu bar reappear.

Other Size opens a dialog box in which you can enter your own size. (For a tip, click Huh? below.)

<Dimmable Button Data>

"Huh?", "Other Size"

<END PANEL>

<DEFINE PANEL> "Other Size"

<FORMAT> "full.tv"

If you choose the Other Size menu item, you must set the width to be between 160 and 640 pixels and the height to be between 120 and 480 pixels.

Remember about proportions: The usual video window width-to-height ratio is about 4 to 3. Setting other proportions will distort the picture.

<END PANEL>

#####

```
# The following panel is for "set a TV show alarm?"
# #####
```

```
<DEFINE PANEL> "AppleTV: TV reminder intro"
<FORMAT> "full.tv"
You can set an alarm to go off when a TV show that you want to see is about
to begin. You do this in the TV Reminders dialog box. You can also change
existing reminders.
```

Which do you want to do? Click one.

```
<radio button> "Add a new TV show reminder.", TRUE,,,APPLEGUIDE
<radio button> "Change a TV show reminder.", false,,,APPLEGUIDE
<radio button> "Remove a TV show reminder.", false,,,APPLEGUIDE
<END PANEL>
```

```
<DEFINE PANEL> "AppleTV: choose TV Reminders"

<FORMAT> "tag.tv"
Do This

<FORMAT> "body.tv"
Choose TV Reminders from the Setup menu.
<coach mark> "Setup-TV Reminders... Menu"
<END PANEL>
```

```
<DEFINE PANEL> "AppleTV: Add reminder"

<FORMAT> "tag.tv"
Do This

<FORMAT> "body.tv"
Click Add to create a new reminder.
<coach mark> "click add item"
<END PANEL>
```

```
<DEFINE PANEL> "AppleTV: edit reminder"
<FORMAT> "tag.tv"
Do This

<FORMAT> "body.tv"
Click a show in the TV Reminders list, then click Edit.
<END PANEL>
```

<DEFINE PANEL> "AppleTV: remove reminder"
<FORMAT> "tag.tv"
Do This

<FORMAT> "body.tv"
Click a show in the TV Reminders list, then click Remove.

<END PANEL>

<DEFINE PANEL> "AppleTV: enter new reminder"
<PANEL PROMPT> "override: BS8.tv"
<FORMAT> "tag.tv"
Do This

<FORMAT> "body.tv"
Enter your TV show and reminder information:

1) Type a name for the reminder in the Name box.

2) In the pop-up menu next to When, indicate the day(s) of the week that the show is on TV. Then in each of the three time pop-up menus (hour, minutes, AM or PM), indicate the time of day the show is on.

3) Click the channel that the show appears on.

<END PANEL>

<DEFINE PANEL> "AppleTV: edit reminder1"
<FORMAT> "tag.tv"
Do This

<FORMAT> "body.tv"
Make your changes to the TV show and reminder information:

• Type a name for the reminder in the Name box.

• In the pop-up menu next to When, indicate the day(s) of the week that the show is on TV. Then in each of the three time pop-up menus (hour, minutes, AM or PM), indicate the time of day the show is on.

• Click the channel that the show appears on.

<END PANEL>

<DEFINE PANEL> "AppleTV: enter new reminder2"
 <PANEL PROMPT> "override: BS8.tv"
 <FORMAT> "tag.tv"
 Do This

<FORMAT> "body.tv"

4) Click Ongoing or One Time Only.

5) Click Warn me and enter how many minutes before the show begins that you want to be warned.

6) Click OK to close the Edit Reminder dialog box.

<END PANEL>

<DEFINE PANEL> "AppleTV: edit reminder2"
 <FORMAT> "tag.tv"
 Do This

<FORMAT> "body.tv"

- Click Ongoing or One Time Only.
- Click Warn me and enter how many minutes before the show begins that you want to be warned.

When you're done editing your reminder, Click OK to close the Edit Reminder dialog box.

<END PANEL>

<DEFINE PANEL> "AVP: click ok to close TV Reminder"
 <FORMAT> "tag.tv"
 Do This

<FORMAT> "body.tv"

Click OK to close the TV Reminders dialog box.

<coach mark> "reminder OK item"

<END PANEL>

The following panels are used in Why Can't I's
 # #####

#####

The following panel is for WCI "see TV or video images?"
 # #####

Uses these panels
#

<DEFINE PANEL> "troubleshooting: no video without cards"

<FORMAT> "full.tv"

To see video or TV images on your computer, you need to have the proper hardware installed. Your computer is missing this hardware.

If you want to see or use images from an external video source such as a VCR or camcorder, you need to install a video input card in your computer. If you want to see or use a television signal, you need to install both a video input card and a TV tuner card.

To learn about the video and TV capabilities of your computer, refer to the manuals that came with it. Or, contact an Apple-authorized dealer for more information.

<END PANEL>

<DEFINE PANEL> "troubleshooting: no video with both cards"

<FORMAT> "full.tv"

If you can't see video or TV images on your computer, make sure that:

- The Video Source in the Controls window is set to the source you are using (TV, Video, or S-Video).
- Your video input card is properly installed in your computer's video-in slot, and your TV tuner card is properly installed in your computer's TV tuner slot. (Refer to the manuals that came with your cards for more information.)
- If you're using an external source, it's properly connected to your computer's video port.

<END PANEL>

<DEFINE PANEL> "troubleshooting: no video with video card"

<FORMAT> "full.tv"

If you can't see video images on your computer, make sure that:

- The Video Source in the Controls window is set to either Video or S-Video.
- Your video input card is properly installed in your computer's video-in slot. (Refer to the manual that came with your video input card for instructions.)
- Your video equipment is properly connected to your computer's video port.

<END PANEL>

```
# #####
# The following panels are for "Why can't I see video or TV images?"
# #####
```

<DEFINE PANEL> "AppleTV: why no images intro"

<FORMAT> "full.tv"

You may not see video or TV images on your monitor if:

- Your video equipment is not properly connected to your computer or you do not have the necessary card installed. (Refer to the manuals that came with your equipment to learn how to connect video equipment and to find out which cards you have installed.)
- You do not have the correct Video Source (TV, Video, or S-Video) selected in the Controls window.

For instructions on setting the Video Source, click Huh? below.

<Dimmable Button Data> "Huh?", "How do I view video or TV on my computer?"

<END PANEL>

```
# The following panels are used in Why can't I
# #####

# #####
# The following panel is for "use my remote control?"
# #####
```

<DEFINE PANEL> "troubleshooting: remote work.tv"

<FORMAT> "full.tv"

If you're having trouble using your remote control, try moving closer to the computer and pointing the remote directly at the remote control receiver (on the front right side of your computer). If it still doesn't work, and you haven't already done the following, do so now:

- Remove the clear plastic tab on the remote control (used to protect the battery during shipping).
- Close all open dialog boxes (by clicking OK in them).
- Choose Preferences from the Setup menu and be sure Disable Remote Control is not checked. (If it is, click to remove the X).

If the remote still doesn't work, change its battery.

<END PANEL>

#####

Following panels are for "How do I change the video window color?"
#

<DEFINE PANEL> "AVP: change color intro"

<FORMAT> "full.tv"

You can set a new color for the border surrounding the video window by choosing a window color under Window Color in the Windows menu.

Note: The Window Color command has no effect on the colors you see inside the video window.

<END PANEL>

<DEFINE PANEL> "AVP: choose color in Window Color"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

Open the Windows menu, then press and hold down the cursor over the Window Color menu item.

The current color is checked. To select a new color, drag the cursor over to the colors submenu, and release the mouse button when you're over the color you want.

<coach mark> "Windows-Window Color Menu"

<END PANEL>

#####

```
#      Following panels are for "How do I set the video input standard?"
#
```

```
<DEFINE PANEL> "AVP: input standard intro"
<FORMAT> "full.tv"
The video input standard determines how Apple Video Player interprets video
(composite or S-video) signals. The standard is preset for your region. In
most cases you won't need to change it.

However, if you need to set your video equipment to interpret video signals
for a different region, you can change the video input standard in the
Preferences dialog box.

<END PANEL>
```

```
#      Insert panel:
#      "AppleTV: choose Preferences"
#
```

```
<DEFINE PANEL> "AVP: choose Video Input Standard"
<FORMAT> "tag.tv"
Do This

<FORMAT> "body.tv"
Under Video Input Standard, choose the setting you need (NTSC, PAL, or
SECAM).

If the setting you choose produces a strange image (for example, the picture
is too small or the colors are odd), try another setting.
<Dimmable Button Data>      "Huh?", "Definitions NTSC, PAL, and SECAM"
<coach mark> "Video Input Standard item"

<END PANEL>
```

```
#####
#      Following panels are for "How do I disable my remote control?"
#
```

```
<DEFINE PANEL> "AVP: disable remote intro"
<FORMAT> "full.tv"
If your equipment came with a remote control, you can turn it off by selecting
Disable Remote Control in the Preferences dialog box.

<END PANEL>
```

```
#      Insert panel:
#      "AppleTV: choose Preferences"
#
```

```
<DEFINE PANEL> "AVP: click Disable Remote Control"
<FORMAT> "tag.tv"
Do This

<FORMAT> "body.tv"
To turn off the remote control, click the box next to "Disable Remote Control"
(an X appears to show it's selected).

To turn the remote back on again, click the Disable Remote Control box so
that the X disappears.
<coach mark> "Disable Remote Control item"
<END PANEL>
```

```
<DEFINE PANEL> "AVP: click OK to close Preferences"
<FORMAT> "tag.tv"
Do This

<FORMAT> "body.tv"
Click OK to close the Preferences dialog box.
<coach mark> "preferences OK item"
<END PANEL>
```

```
#####
#      Following panels are for "How do I set my remote to confirm Power Off?"
#
```

```
<DEFINE PANEL> "AVP: confirm power off intro"
<FORMAT> "full.tv"
If your equipment came with a remote control, you can make a confirmation
dialog box appear so that you can change your mind about shutting down the
computer when you press the remote's Power button.

You choose this option in the Preferences dialog box.
<END PANEL>
```

```
#      Insert panel:
#      "AppleTV: choose Preferences"
#
```

<DEFINE PANEL> "AVP: click Confirm Power Off"

<FORMAT> "tag.tv"

Do This

<FORMAT> "body.tv"

To make a confirmation dialog box appear, click the box next to "Confirm Power Off" (an X appears to show it's selected). Now when you press the Power button on your remote, you'll be asked if you really want to shut down.

If you decide you don't want to see this message, click the Confirm Power Off box to make the X disappear. Now if you press the Power button on your remote, your computer will shut down with no warning message.

<coach mark> "Confirm Power Off item"

<END PANEL>