

PC Double Shock Controller Instruction

PRODUCT INTRODUCTION

PC Double Shock Controller is used for the PC with USB port. Most test proved it acquit itself very good by the games of the PC with DirectX.

COMPUTER'S BASE CONFIGURATION

Pentium® 75MHz or higher processor

Windows® 95 or 98

16Mb of Ram

DirectX™ or newer edition

Gameport supported by DirectX™

LPT supported by DirectX™.

PC Double Shock Controller Package

PC Double Shock Controller

Driver disk

NOTICE

PC Double Shock Controller only is use for Windows® 95 or Windows® 98, and it is not use for other operating system. Otherwise , you only can analog the PC shock ro-cker's effect under Microsoft® direct Input® or Force Feedback® API 5.0 or newer edition's PC game.

Please according to below process installing PC Double Shock Controller.

CONNECTING

1. Turn off the PC. The PC USB port of PC Double Shock Controller connected the PC's USB prot and the PC LPT(25 needles) of the PC Double Shock Controller connected the pc LPT.
2. After the connecting line is connected, you may start to install driver.

INSTALLED DRIVED

1. Turn on the computer.
2. In windows® 95/98, you select settings/control Panel from the Start menu.
3. In Settings/Control, double click the Game Controllers icon.
4. In "General" page, click Add of alt-d. In "Add game controller ", select " add other" or alt-a.
5. Insert disk include driver program.
6. Select "Installing from disk " or alt-h, the last click "ok".
7. In "Add game controller " , select " Techange® PS-PC connector " and click "ok".

8. In "Add game controller " , select "Techange® PS-PC Connector" and "Force FeedBack® available" , click "ok" , In "General" page, click "Properties".
9. In "Controller Type " , select " PSX Left Analog", "PSX Right Analog "or "PSX Digital ",the last click "ok".
10. According "Properties" to complete the other configuration. Complete installed.

ADVANCE CONFIGURATION

For un-original shock rocker of PlayStation® , it has very good effect when it should be adjusted suitable . Please according below method to configured.

1. In windows®95/98 ,you select Setting/Control Panel from the Start menu.
2. In Settings/Control, double click the Game Controllers icon.
3. In "General " page , select controller of rejiggered configured ,and click "Pro-perties ".
4. In "Advanced "page ,adjusted "PSX SCAN DELAY"
5. If controller un-normal jumpiness, please adjusted value of the "PSX SCAN DELAY" to 1-2.If controller has not reactivity, please adjusted value of the "PSX SCAN DELAY " to 4=10.