

Welcome to **MPEG Master** Help.

This MPEG board allows you have full screen motion playback which employe **MPEG I** on the board. Following are the commands you can use on MPEG Player board.

Commands

Visionetics CD Player

When press this area, you can call up the help file.



When this button pressed, it will prompt a float menu like this:

Minimize, Always On Top, Exit.

Minimize -- the MPEG Master will become an icon, at this time, all of the Hot-Key is disabled.

Always On Top -- the MPEG Master control panel will be bring to top above all the windows.

Exit -- the MPEG Master will be shutdown.

Press Alt+Ctrl+'q' or 'Q' will do the same purpose



When press this button, it will activate file system to load a new MPEG file and prepare to display.



If a Video CD disc exists, this button provide user select the previous available MPEG video for playing .

If a CDI movie disc exists, this button skip backward by 2 minutes.

You can press Alt+Ctrl+'B' or 'b' key for the same function.



This button will set MPEG board to play back video one frame by one frame.



If there is any necessary to slow down the speed of playing video, press this button will fit it. Press Alt+Ctrl+'I' or 'L' key will perform the same purpose.



If you want to stop the playing video, press this button. Press Alt+Ctrl+'s' or 'S' will perform the same purpose.



Before press "PLAY" button, please make sure the playing file had been loaded or the **MPEG Player** supposes you have a CDI-FMV or Karaoke CD (according to the default setting in INI file) inserted in your CD-ROM drive and play it. This button will play the MPEG file as normal speed. Press Alt+Ctrl+"p" or "P" will perform the same function.



This button will pause the playing MPEG video. Press it again for resume to previous status. You can press Alt+Ctrl+"u" or "U" for the same function.



This button will provide you a fast forward playing mode. You can press Alt+Ctrl+'f' or 'F' key for the same function.



If a Video CD disc exists, this button provide user select the next available MPEG video for playing .
If a CDI movie disc exists, this button skip forward by 2 minutes.
You can press Alt+Ctrl+'N' or 'n' key for the same function.



This button control repeat play on/off.



This button provide you a Spatial stereo audio.



This button provide you a Linear stereo audio.



This button provide you a Pseudo stereo audio.



This button provide you a Mono stereo audio.



This button activate Volume control.



This button activate Treble control.



This button activate Bass control.



This button increment the activated volume, treble or bass. You can press **UP arrow** key for the same function.



This button decrement the activated volume, treble or bass. You can press **DOWN arrow** key for the same function.



This is a balance control button. It will increment left and decrement right volume.



This is a balance control button. It will increment right and decrement left volume.



This button control mute on/off.

Alt+Ctrl+SPACE_BAR

This key control video output to TV/VGA monitor.

Alt+Ctrl+F2 -- adjust display screen left to 1 pixel

Alt+Ctrl+F3 -- adjust display screen up to 1 line

Alt+Ctrl+F4 -- adjust display screen right to 1 pixel

Alt+Ctrl+F5 -- adjust display screen down to 1 line