 
 
 


Codes for Panasonic and Technics.

The code is 48 bit long.

Carrier: 32kHz



Space between transmissions 190T.

T = 400us approx

***** PANASONIC

----- Video: 40040900

VTR	BCB5
Play	5059
Stop	0009
Rew	4049
FF	C0C9
Pause	6069
Still adv 3039	
Rec	1019
Slow	F0F9
Slow+	7178
Slow-	F1F8
1	0801
2	8881
3	4841
4	C8C1
5	2821
6	A8A1
7	6861
8	E8E1
9	1811
0	9891
-/--	DCD5
Clock/Counter	6A63
VTR/TV	6C65
Input select	030A
Reset	2A23
Monitor	8980
Time search	222B
Tracking+ 8D48	
Tracking- 4D44	

----- Amp: 40040543

On/Off	FDBB
Vol+	0D4B
Vol-	8DCB
Sleep	3D7B
Display	F17B

----- CD: 40040543 (Same as amp)

Play	E1A7
Stop	0147
Rew	2167
FF	A1E7
Program	D197
Cancel	B1F7
Random	4107
Repeat	81C7
1	3094
2	89CF
3	490F
4	C98F
5	296F
6	A9EF
7	692F
8	E9AF
9	195F
0	99DF
+10	F9BF

----- Tape: 40040543 (Same as amp)
Play 6523
RewPlay A5E3
Stop 0543
Rew 4503
FF C583
Reverse mode 7533
Counter reset F5B3
Deck 1/2 B5F3

----- Tuner: 40040543 (Same as amp)
Fm mode 2761
Tune/Band 1D5B
1 3094
2 89CF
3 490F
4 C98F
5 296F
6 A9EF
7 692F
8 E9AF
9 195F
0 99DF

***** TECHNICS

----- Amp: 40040500
Vol+ 0401
Vol- 8481
Muting 4C49
Super Bass 4346
Aux Digital 5154
Dat 191C
VCR 797C
VDP 4540

----- Amp: 40040520

on/off BC99
Sleep 694C
CD 0326
Tape 83A6
Tuner 4366

----- CD: 40040550

Play 5005
Pause 6035
Stop 0055
ff 5207
Rew 92C7
Program 5401
Cancel C590
Open/Close 80D5
Time mode AAF
1 085D
2 88DD
3 481D
4 C89D
5 287D
6 A8FD
7 683D
8 E8BD
9 184D
0 98CD
>10 2174

----- Tape: 40040510

Deck 1/2 A9BC
Play D0C5
Rew Play 5045
Stop 0015
Rew C0D5
FF 4055
Pause 6075
Rec 1005
Rec mute 4145

----- Tuner: 40040520

1	082D
2	88AD
3	486D
4	C8ED
5	280D
6	A88D
7	684D
8	E8CD
9	183D
0	98BD

----- Phono: 40040570

Play	5025
Stop	0075
