Twin View Setting Guide

A. EQUIPMENT

- 1. System: Windows 2000
- 2. Model: SP6800/32M P38
- 3. BIOS: 3.11.00.18
- 4. Driver: V7.xx or later
- 5. Two monitor

B. SETUP

- 1. Right click mouse button on desktop, select properties
- 2. select settings and then click advanced...

Display Properties
Background Screen Saver Appearance Web Effects Settings
AlphaScan 711 on NVIDIA GeForce2 MX
Colors Screen area High Color (16 bit) Image: Color State of the s
Iroubleshoot
OK Cancel Apply

3. select "TwinView "

Default Monitor a	and NVIDIA Gel	Force2 MX Prop	erties	? ×	
General	Adapter	Monitor	Troublesh	ooting	
Color Manage	Color Management 🛛 💁 GeForce2 MX 🛛 🔗 TwinView				
TwinView allow monitor, digital fl	s you to connect at panel or TV) to	two separate outp a single graphics	out devices (anal board.	og	
TwinView Mode	IS 2				
🖲 <u>S</u> tandar	Standard (TwinView disabled)				
C <u>C</u> lone	C <u>C</u> lone C <u>V</u> ertical Span				
You can config image below.	You can configure a display device by clicking on the appropriate monitor image below.				
Display:					
TwinView Disp	olay 1: Analog Mo	nitor		-	
Scan Display Connectionsutput Device >					
		ОК	Cancel	Apply	

4. Your can chose " **Clone** or **Horizontal Span** or **Vertical Span**", and then click " **Apply**"

fault Monitor (and NVIDIA	GeForce2 M	IX Prope	erties ?
General	Adapter	Mor	nitor	Troubleshooting
Color Manage	Color Management 🔰 🧕		e2 MX	일 TwinView
TwinView allow monitor, digital f	s you to conne lat panel or T\	ect two separ /) to a single (ate outpu graphics l	it devices (analog board.
TwinView Mode	es —			
⊙ <u>S</u> tandar	d (TwinView o	disabled)	О <u>н</u> а	rizontal Span
Clone O Vertical Span				
You can configure a display device by clicking on the appropriate monitor image below.				
Display:				
TwinView Disp	olay 1: Analog	Monitor		•
Make this th	ne primary disp	olay		
	Sca	an Display Co	nnection	<u>Output Device ></u>
	[OK	C	ancel <u>A</u> pply

Clone mode: as you see is a copy screen.

efault Monitor a	and NVIDI	A GeF	orce2 MX	Properl	ties	?
Connect	A			. 1	Trachlard	
General	Adapt	er	Monito	n uu	I roublesh	iooting inView
Lolor Manage	ment	<u>~</u>	GeForce2	MX	<u>~</u> 1%	inview
TwinView allows you to connect two separate output devices (analog monitor, digital flat panel or TV) to a single graphics board.				log		
TwinView Mode	es ————————————————————————————————————					
Standard (TwinView disabled)						
C <u>C</u> lone C <u>V</u> ertical Span						
You can config image below.	ure a displa	iy devic	e by clickin:	g on the	appropriate i	monitor
Display:						
TwinView Disp	olay 1: Anal	og Mor	nitor			-
Make this the primary display						
Scan Display Connections					evice >	
			OK	Can	cel	Apply

Horizontal Span: As you see, the screen can extend Horizontal.

-				
ault Monitor a	and NVIDIA Ge	Force2 MX Prope	erties <u>?</u>]	
General	Adapter	Monitor	Troubleshooting	
Color Manage	Color Management		🕺 TwinView	
TwinView allow monitor, digital f	s you to connect at panel or TV) t	two separate outpu o a single graphics l	ut devices (analog board.	
TwinView Mode	IS			
C <u>S</u> tandar	d (TwinView disa	abled) C <u>H</u> a	orizontal Span	
C <u>C</u> lone		⊙ <u>V</u> e	rtical Span	
You can config image below.	You can configure a display device by clicking on the appropriate monitor image below.			
Display:				
I winView Disp	olay 1: Analog Mi	onitor	_	
Make this the primary display				
Scan Display Connections				
		ОК С	ancel <u>A</u> pply	

Vertical Span: As you see, the screen can extend Vertical.

Trademark Acknowledgments

All brand names and trademarks are the property of their owners.