OUTP

**Format** 

CALL OUTP(port,databyte)

Cross Reference

INP

You may use CALL OUTP either as a program statement or a command.

Use only ports 1 or 2 as the PIO or PIO/2 ports respectively.

Sends a databyte to a port.

The databyte may be any integer between 0 and 255.

Data is received and sent internally through various components within the computer, known as ports.

The OUTP statement is used to obtain direct control of a device such as the keyboard, sound, etc.

OUTP is the complement function to the INP command.

PALETTE --Subprogram

**PALETTE** 

**Format** 

CALL PALETTE(#color,redvalue,bluevalue,greenvalue[,#color2,redvalue2,bluevalue2,greenvalue2,...])

Cross Reference TCOLOR, RESETPLT

Description

Mixes a new color palette for one or more colors in the 16-color sets and the 4-color set.

The range for each colorvalue is from 1 to 8.

The number-color for MODE(3,2) is limited to colors 1-4 (See Graphics).

A new command or program statement CALL RESETPLT Resets the palette to the default values.

## 1 VERSION 4.0 DDI SOFTWARE