

Each mounted RAM disk has an item in the RAM disk menu; a check mark next to it indicates that its window is open. To open a RAM disk's window, select the item. If you select an item with a check mark already next to it, it brings that window to the front.