

Camcorder Battery Equivalent List for Uniross

Camcorder Make	Model	Uniross Type
Aiwa	7350	VP962
Aiwa	CV-50	VP22
Aiwa	VF-80	VP22
Akai	PVC-100E	VP962
Aka	PVS-C20E	VP10
Akai	PVS-C40E	VP10
Ambico	V-0880	VP66S
Ambico	V-0825	VP66S
Arkor	CL-800	VP66S
Arkor	NP-55	VP66S
Arkor	NP-77	VP66S
Bauer-Bosch	C51	VP66
Bauer-Bosch	C61	VP10
Bauer-Bosch	C-81	VP77S
Bauer-Bosch	816-AF	VP30
Bauer-Bosch	VCC516	VP30
Bauer-Bosch	VCC526	VP30
Bauer-Bosch	VCC550	VP30
Bauer-Bosch	VCC606AF	VP962
Bauer-Bosch	VCC610	VP962
Bauer-Bosch	VCC616AF	VP962
Bauer-Bosch	VCC626	VP962
Bauer-Bosch	VCC651	VP10
Bauer-Bosch	VCC656	VP962
Bauer-Bosch	VCC660	VP962
Bauer-Bosch	VCC660AF	VP962
Bauer-Bosch	VCC820	VP77
Bauer-Bosch	VCC858	VP77
Bauer-Bosch	VRP-30	VP30
Beaulieu	8008	VP66
Bell & Howell	20910	VP10
Bescor	KLK-20	VP66
Blaupunkt	CR-1500	VP30
Blaupunkt	CCR570	VP10
Blaupunkt	CCR800	VP66
Blaupunkt	CCR810	VP66
Blaupunkt	CCR8110	VP66
Blaupunkt	CCR820	VP66
Blaupunkt	CCR8200	VP66
Blaupunkt	CCR8500	VP66
Blaupunkt	CCR880H	VP66
Blaupunkt	CR1800	VP30
Blaupunkt	CR2000S	VP30
Blaupunkt	CR4600	VP962
Blaupunkt	CR4700	VP10
Blaupunkt	CR4800	VP962
Blaupunkt	CR5000	VP962
Blaupunkt	CR5100	VP962
Blaupunkt	CR6000	VP962
Blaupunkt	CR6200	VP10S
Blaupunkt	PTV8-77	VP66
Blaupunkt	RTX260	VP30

Brand	VM036C	VP962
Canon	A1	VP77S
Canon	A1 Digital	VP77
Canon	A1 Mk 2	VP77S
Canon	A10	VP77S
Camcorder	Model	Uniross
Make		Type
Canon	A2 Hi	VP77S
Canon	BP-30	VP30
Canon	CR-30A	VP30
Canon	CV-T60	VP30
Canon	CV-T65	VP30
Canon	CV-T70	VP30
Canon	E06	VP77S
Canon	E08	VP77S
Canon	E09	VP77S
Canon	E110	VP77S
Canon	E20	VP77S
Canon	E200	VP77S
Canon	E30	VP77S
Canon	E40	VP77S
Canon	E400	VP77S
Canon	E440	VP77S
Canon	E460	VP77S
Canon	E110	VP77S
Canon	E50	VP77S
Canon	E200	VP77S
Canon	E51	VP77S
Canon	E53	VP77S
Canon	E57	VP77S
Canon	E60	VP77S
Canon	E600	VP77S
Canon	E110	VP77S
Canon	E61	VP77S
Canon	E63	VP77S
Canon	E640	VP77S
Canon	E65	VP77S
Canon	E67	VP77S
Canon	E70	VP77S
Canon	E77	VP77S
Canon	E80	VP77S
Canon	E800	VP77S
Canon	E808	VP77S
Canon	E850	VP77S
Canon	E90	VP77S
Canon	F1000A	VP30
Canon	H460	VP77S
Canon	H480	VP77S
Canon	H640	VP77S
Canon	H660	VP77S
Canon	H680	VP77S
Canon	H800	VP77S
Canon	H850	VP77S
Canon	L1	VP77S
Canon	LX-1	VP77S
Canon	UC-1	VP77S

Canon	UC-2	VP77S
Canon	UC-2 HI	VP77S
Canon	UC-25 HI	VP77S
Canon	UC-30A	VP30
Canon	UC-40A	VP30
Canon	USC2	VP77S
Canon	USC3	VP77S
Canon	VL-20	VP77S
Canon	VL-30	VP77S
Canon	VR-20A	VP30
Camcorder	Model	Uniross
Make		Type
Canon	VR-30A	VP30
Canon	VR-40A	VP30
Canon	VR-50A	VP30
Canon	VT-LC50	VP77S
Chinon	CV-765	VP30
Chinon	CV-770	VP30
Chinon	CVC-600	VP962
Chinon	CVC-800	VP30
Chinon	CVT-60	VP30
Chinon	CVT-60G	VP30
Chinon	CVT-65	VP30
Chinon	CVT-7	VP30
Chinon	CVT-70	VP30
Chinon	CVT-72	VP30
Chinon	CVT-73	VP30
Chinon	CVT-80	VP30
Chinon	CVT124	VP30
Chinon	C8-SC96	VP10
Chinon	C8-SC98	VP10
Chinon	C9-SC98	VP10
Curtis Mathes	HV-773	VP30
Curtis Mathes	768	VP30
Curtis Mathes	770	VP30
Curtis Mathes	DV-800	VP30
Curtis Mathes	AV800	VP30
Curtis Mathes	AV850	VP962
Curtis Mathes	BV880	VP30
Curtis Mathes	CV800	VP30
Curtis Mathes	DV600	VP962
Curtis Mathes	FV600	VP10
Curtis Mathes	FV900	VP10
Curtis Mathes	PV800	VP30
Curtis Mathes	QD0004	VP30
Emerson	VCAM-13	VP962
Emerson	VCAM-14	VP962
Emerson	VCAM-18	VP962
Ferguson	3C03	VP962
Ferguson	3C08	VP962
Ferguson	FC05	VP962
Ferguson	FC06	VP962
Ferguson	FC07	VP962
Ferguson	FC08	VP962
Ferguson	FC23	VP962
Ferguson	FC27	VP962

Ferguson	FC28	VP962
Fisher	FVC30	VP66
Fisher	FVC701	VP66
Fisher	FVC720	VP66
Fisher	FVC730	VP66
Fisher	FVC750	VP66
Fisher	FVC770	VP66
Fisher	FVC800	VP66
Fisher	FVC801	VP66
Fisher	FVC880	VP66
Fisher	FVC901	VP66
Fisher	FVC950	VP66
Fisher	FVC990	VP66
Fisher	FVC1000	VP66
Camcorder	Model	Uniross
Make		Type
Fisher	FVC2000	VP66
Fisher	FVC4000	VP66
Fisher	FVCP701	VP66
Fisher	FVCP750	VP66
Fisher	FVCP901	VP66
Fisher	FVCP950	VP66
Fisher	FVCP2000	VP66
Fisher	FVCS2	VP66
Fisher	FVP201	VP22
Fisher	FVP501	VP22
Fisher	FVP503	VP22
Fisher	FVP803	VP66
Fujix	F60 Wide	VP66
Fujix	F610	VP66
Fujix	F615	VP66
Fujix	F620	VP66
Fujix	F650	VP66
Fujix	F810	VP66
Fujix	FF60 Wide	VP66
Fujix	FH80	VP66
Fujix	H80	VP66
Fujix	HP40 Proj	VP66
Fujix	M6AF	VP22
Fujix	M600AF	VP66
Fujix	M680	VP66
Fujix	M690	VP66
Fujix	M830HR	VP66
Fujix	M890	VP66
Fujix	P90	VP22
Fujix	P100	VP22
Fujix	P300AF	VP22
Fujix	P600AF	VP22
Fujix	P650	VP66
Fujix	P660	VP66
Fujix	P850	VP66
Fujix	Z600AF	VP22
Goldstar	GS8AF	VP22
Goldstar	GS-E2	VP66
Graetz	SK60	VP66
Graetz	TMC93	VP962

Graetz	TMC99	VP962
Graetz	TMC108	VP962
Graetz	TMC4838	VP962
Graetz	TMC4877	VP962
Graetz	TMC4888	VP66
Grundig	LC125C	VP66
Grundig	LC180	VP66
Grundig	LC225	VP66
Grundig	LC230	VP66
Grundig	VSC20	VP962
Grundig	VSC30	VP962
Grundig	VSC40	VP962
Grundig	VSC45	VP962
Grundig	VSC50AF	VP962
Grundig	VSC55	VP10
Grundig	VSC60	VP962
Grundig	VSC70	VP962
Grundig	VSC75	VP10
Camcorder	Model	Uniross
Make		Type
Grundig	VSC80	VP962
Grundig	VSC85	VP962
Grundig	VS8000	VP66
Grundig	VS8100	VP66
Hitachi	VME10A	VP81
Hitachi	VME15A	VP81
Hitachi	VME23A	VP81
Hitachi	VME23E	VP81
Hitachi	VME25	VP81
Hitachi	VME55A	VP81
Hitachi	VMH18A	VP81
Hitachi	VMH39	VP81
Hitachi	VMH57A	VP81
Hitachi	VT6000	VP962
Hitachi	VT6500	VP962
Hitachi	VT6800	VP962
ITT	VMC3639A	VP962
ITT	VMC3877AF	VP962
ITT	VMC6000	VP962
JVC	GF500U	VP962
JVC	GF700U	VP962
JVC	GFS550U	VP962
JVC	GR25U	VP962
JVC	GR-35U	VP962
JVC	GR40	VP962
JVC	GR-45	VP962
JVC	GR60U	VP962
JVC	GR65EG	VP962
JVC	GR70U	VP962
JVC	GR-400	VP962
JVC	GR450	VP962
JVC	GR-A1U	VP962
JVC	GR-A30U	VP962
JVC	GR-AW1	VP10
JVC	GR-AX2	VP10
JVC	GR-AX5	VP10

JVC	GR-AX7EG	VP10
JVC	GR-AX10	VP10
JVC	GR-AX7U	VP10
JVC	GR-AX55U	VP10
JVC	GR-AX300	VP10
JVC	GR-AX500	VP10
JVC	GRC-1U	VP962
JVC	GR-C2U	VP962
JVC	GRC-7	VP962
JVC	GRC-9	VP962
JVC	GR-C9S	VP962
JVC	GR-C11	VP962
JVC	GRC-25	VP962
JVC	GR-C35U	VP962
JVC	GR-C40	VP962
JVC	GRC-55	VP962
JVC	GR-C250	VP962
JVC	GR-C555U	VP962
JVC	GR-LT5	VP10
JVC	GR-LT7	VP10
JVC	GR-LT10	VP10
JVC	GR-LT90	VP10
JVC	GR-LT91	VP10
JVC	GR-M3U	VP10
JVC	GR-M5U	VP10
Camcorder	Model	Uniross
Make		Type
JVC	GR-M7PRO	VP10
JVC	GR-S35	VP962
JVC	GR-S55	VP962
JVC	GR-S70EG	VP962
JVC	GRS70U	VP962
JVC	GR-S75	VP962
JVC	GR-S99	VP962
JVC	GR-S505U	VP962
JVC	GRS-707E	VP962
JVC	GR-S707U	VP962
JVC	GR-SX9	VP10
Loewe	Profi 80	VP81
Loewe	Profi 85	VP81
Loewe	Profi S95	VP81
Mitsubishi	HS-C30U	VP962
Mitsubishi	HS-C40	VP962
Mitsubishi	HS-CX1	VP10
Mitsubishi	HS-CX4	VP10
Mitsubishi	HS-CC7U	VP10
NEC	CV-30U	VP962
NEC	CV-40U	VP962
NEC	EM-A8U	VP22
NEC	NCVK4000	VP962
NEC	V-30	VP30
NEC	V-40	VP30
NEC	V-50	VP30
NEC	V-60	VP30
NEC	V-200	VP30
NEC	V-300	VP30

NEC	V-400	VP30
Olympus	VC104	VP30
Olympus	VC105	VP30
Olympus	VC106	VP30
Olympus	VX307	VP30
Olympus	VX308	VP30
Olympus	VX402	VP30
Olympus	VX403	VP30
Olympus	VX404	VP30
Olympus	VX406	VP30
Olympus	VX806	VP66
Olympus	VXS405	VP30
Panasonic	NV180	VP30
Panasonic	NV3000	VP962
Panasonic	NV5800	VP30
Panasonic	NV5810	VP30
Panasonic	NV5850	VP30
Panasonic	NV8000	VP30
Panasonic	NV8100	VP30
Panasonic	NV8110	VP30
Panasonic	NV8410	VP962
Panasonic	NV8484	VP30
Panasonic	NV8485	VP30
Panasonic	NV8500	VP30
Panasonic	NV8600	VP30
Panasonic	NV9000	VP30
Panasonic	NV9600	VP30
Panasonic	NVG1	VP10
Panasonic	NVG2	VP10
Panasonic	NVG3E	VP10
Panasonic	NVM5	VP962
Camcorder	Model	Uniross
Make		Type
Panasonic	NVM7	VP30
Panasonic	NVM8PX	VP30
Panasonic	NVM10K	VP962
Panasonic	NVM30EG	VP962
Panasonic	NVM33KIT	VP962
Panasonic	NVM50	VP962
Panasonic	NVM55	VP962
Panasonic	NVM70	VP962
Panasonic	NVM90	VP962
Panasonic	NVM350	VP962
Panasonic	NVM550	VP962
Panasonic	NVMC5	VP962
Panasonic	NVMC6	VP962
Panasonic	NVMC10	VP962
Panasonic	NVMC20	VP962
Panasonic	NVMC30	VP962
Panasonic	NVMC70	VP962
Panasonic	NVMS1	VP30
Panasonic	NVMS2	VP30
Panasonic	NVMS50	VP962
Panasonic	NVMS60	VP962
Panasonic	NVMS90	VP962
Panasonic	NVMS95E	VP10

Panasonic	NVMV1	VP962
Panasonic	NVS1	VP10
Panasonic	NVS5E	VP10
Panasonic	NVS7	VP10
Panasonic	NVS9	VP10
Phillips	VKR2000	VP30
Phillips	VKR6820	VP30
Phillips	VKR6830	VP962
Phillips	VKR6835	VP962
Phillips	VKR6836	VP962
Phillips	VKR6837	VP962
Phillips	VKR6838	VP962
Phillips	VKR6840	VP962
Phillips	VKR6841	VP962
Phillips	VKR6842	VP962
Phillips	VKR6843	VP962
Phillips	VKR6847	VP10
Phillips	VKR6850	VP30
Phillips	VKR6851	VP30
Phillips	VKR6855	VP30
Phillips	VKR6865	VP962
Phillips	VKR6870	VP10
Phillips	VKR6875	VP10
Phillips	VKR6880	VP10
Phillips	VKR900F	VP962
Phillips	VKR9000	VP962
Phillips	VKR9005	VP962
Phillips	VKR9010	VP10
Phillips	VKR9300	VP962
Sony	CCDF36	VP66
Sony	CCDF38	VP66
Sony	CCDF40	VP66
Sony	CCDF45	VP66
Sony	CCDF50	VP66
Sony	CCDF55	VP66
Sony	CCDF70	VP66
Sony	CCDF77	VP66
Sony	CCDF250	VP66
Camcorder	Model	Uniross
Make		Type
Sony	CCDF330	VP66
Sony	CCDF355	VP66
Sony	CCDF370	VP66
Sony	CCDF380	VP66
Sony	CCDF450	VP66
Sony	CCDF455	VP66
Sony	CCDF500	VP66
Sony	CCDFX41	VP66
Sony	CCDFX51	VP66
Sony	CCDFX310	VP66
Sony	CCDFX410	VP66
Sony	CCDFX510	VP66
Sony	CCDFX710	VP66
Sony	CCDSP5	VP66
Sony	CCDSP7	VP66
Sony	CCDSP9	VP66

Sony	CCDTR5	VP66
Sony	CCDTR6	VP66
Sony	CCDTR7	VP66
Sony	CCDTR51	VP66
Sony	CCDTR71	VP66
Sony	CCDTR75	VP66
Sony	CCDTR81	VP66
Sony	CCDTR101	VP66
Sony	CCDTR205	VP66
Sony	CCDTR705	VP66
Sony	CCDTR900	VP66
Sony	CCDV1	VP22
Sony	CCDV3	VP22
Sony	CCDV5	VP22
Sony	CCDV7	VP22
Sony	CCDV9	VP66
Sony	CCDV11	VP66
Sony	CCDV35	VP66
Sony	CCDV88	VP66
Sony	CCDV99	VP66
Sony	CCDV330	VP66
Sony	CCDV600	VP66
Sony	CCDV700	VP66
Sony	CCDV701	VP66
Sony	CCDV708	VP66
Sony	CCDV900	VP66
Toshiba	A1-33A	VP962
Toshiba	A1-420	VP962
Toshiba	A1-420F	VP962
Toshiba	A1-420P	VP962